

#### Description

Follow these instructions to add the water dispense feature to your 7 Series or 15 Series dispenser.



#### **CAUTION!**


*Only qualified technicians should attempt to service or maintain this equipment.*

If you experience any problems during the installation process, please call Follett Technical Service toll-free at (877) 612-5086 or +1 (610) 252-7301 for assistance.

#### Access Internal Components

1. Unplug dispenser.
2. Turn off water supply to dispenser.
3. Remove (unscrew) chrome ice dispenser chute (**Fig. 1.1**).
4. Remove the drip tray (**Fig. 1.2**).
5. Remove the two screws (**Fig. 1.3**) on the front panel (behind the drip tray).
6. Remove and set aside the front panel (**Fig. 1.4**) - **do not disengage the plug on the back of the User Interface**.
7. Lift and remove the top panel, set aside (**Fig. 1.5**).
8. Remove two screws (**Fig. 1.6**) and remove left side panel.


Fig. 1

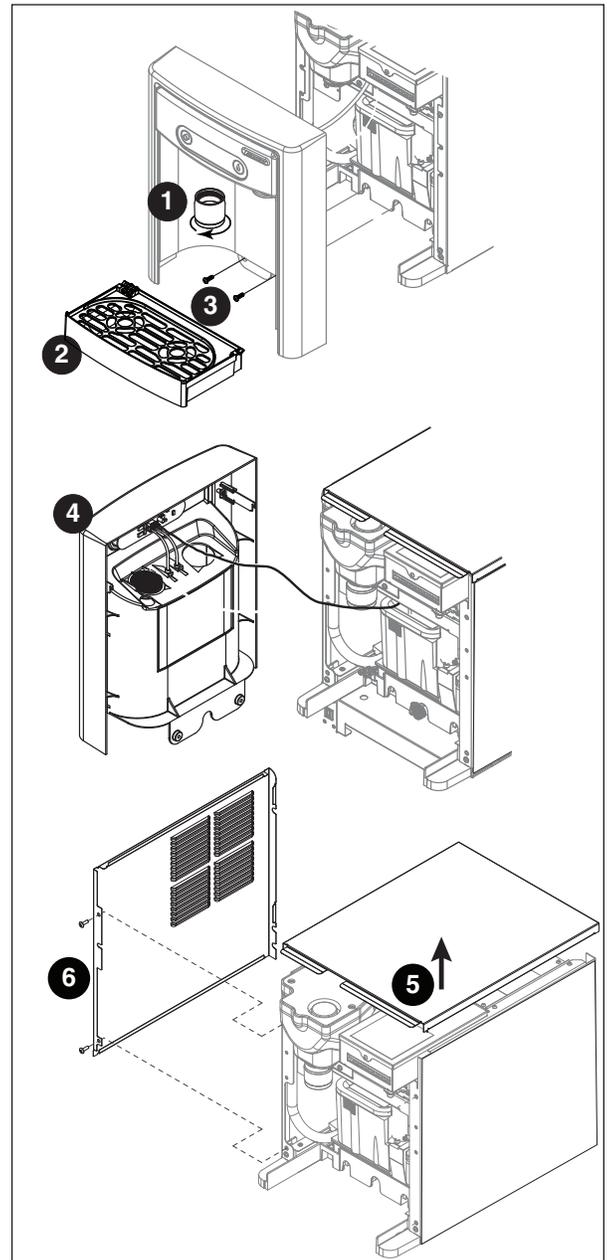

## Add Water Dispense Feature


1. Cut the water supply line from the incoming water valve (or water filter if so equipped) to the reservoir where shown. (Ice Hopper and other components removed for clarity) (**Fig. 2**).

**Fig. 2 (top view)**

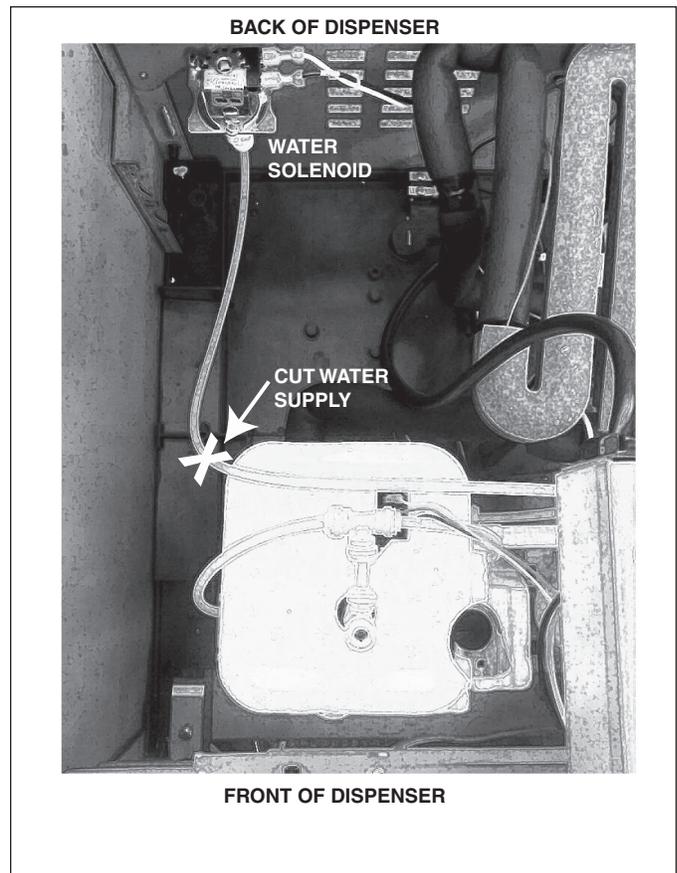


2. Connect the tee as shown; making sure the tubing is completely seated into the 'John Guest' fittings (**Fig. 3**).

**Fig. 3**

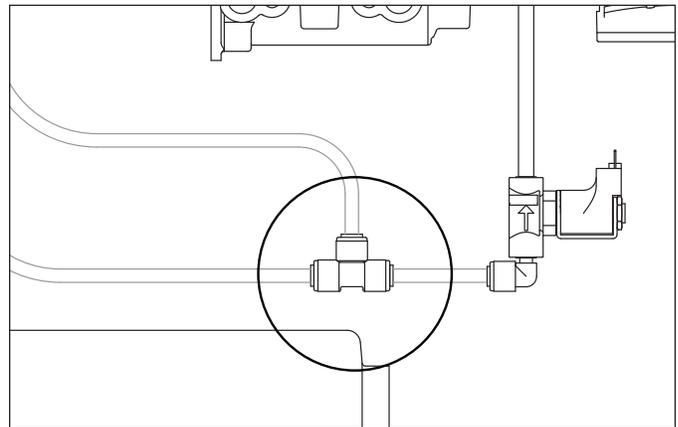


3. Bolt the water solenoid valve to the front horizontal frame member using the appropriate hardware. **(Fig. 4)**. Note: Other components not shown for clarity.
  - For 7 Series before serial number L84098 and 15 Series before serial number L84019: the new valve must be mounted to an adapter plate **(Fig. 4.1)**. This can be mounted with two included pointed-tip screws. The bracket then gets mounted to the sheet metal using the same method that was used originally:
    - For units that originally used nuts and screws **(Fig. 4.2)**.
    - For units that originally used just screws **(Fig. 4.3)**.
  - For 7 Series after serial number L84097 and 15 Series after serial number L84018: the valve can be mounted directly to the unit frame using the pointed-tip screws.
4. Connect the black and white wires to the two spade terminals on the solenoid (wires are on all models).

**Fig. 4**

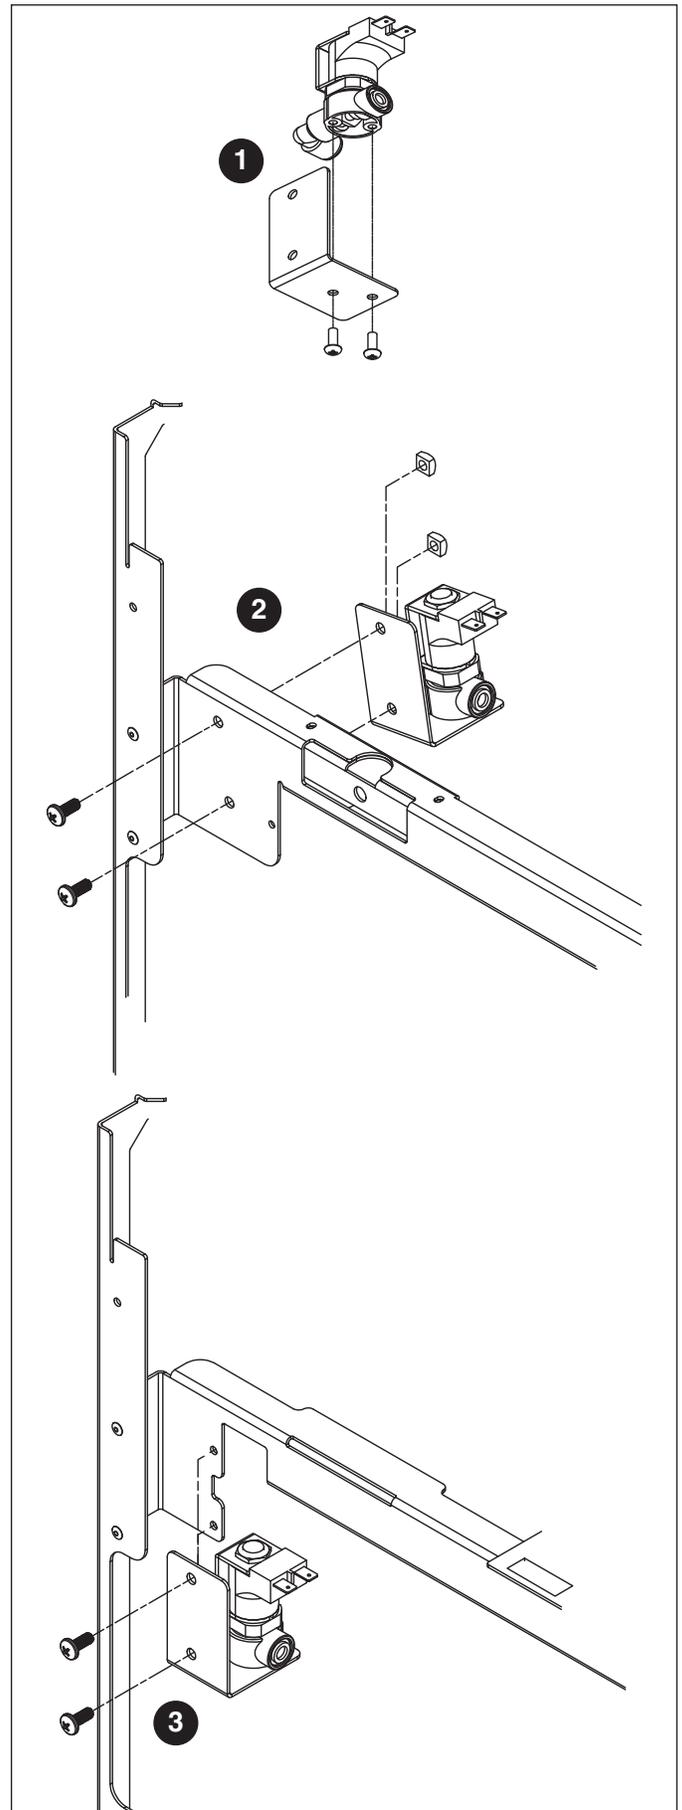


5. On the front panel, pop out the black plug from the front panel (**Fig. 5.1**) and snap in place the water nozzle from the top (**Fig. 5.2**).

**Fig. 5**

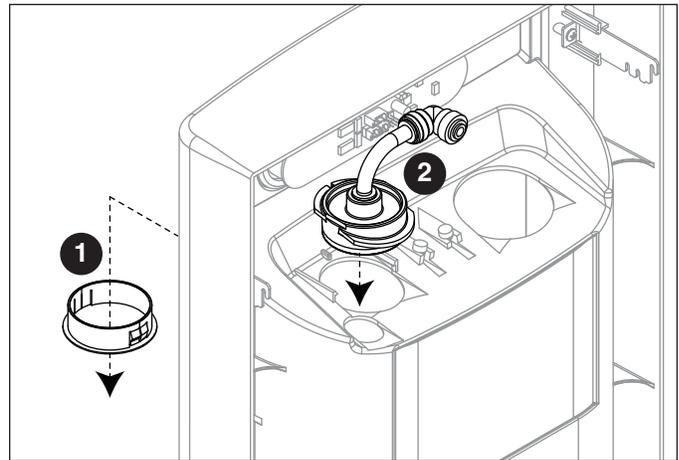


6. Connect water line from the solenoid valve to the fitting on the nozzle - make sure it is completely seated (**Fig. 6**).

**Fig. 6**

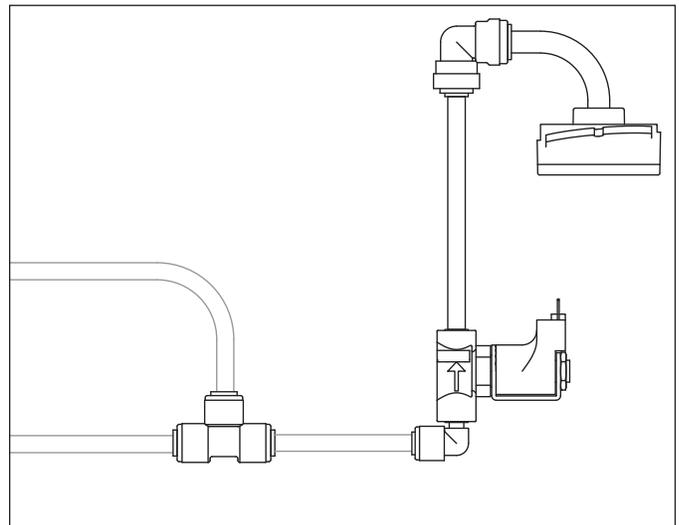

7. Remove (1) screw and top of control board enclosure (**Fig. 9**).

**Fig. 7**

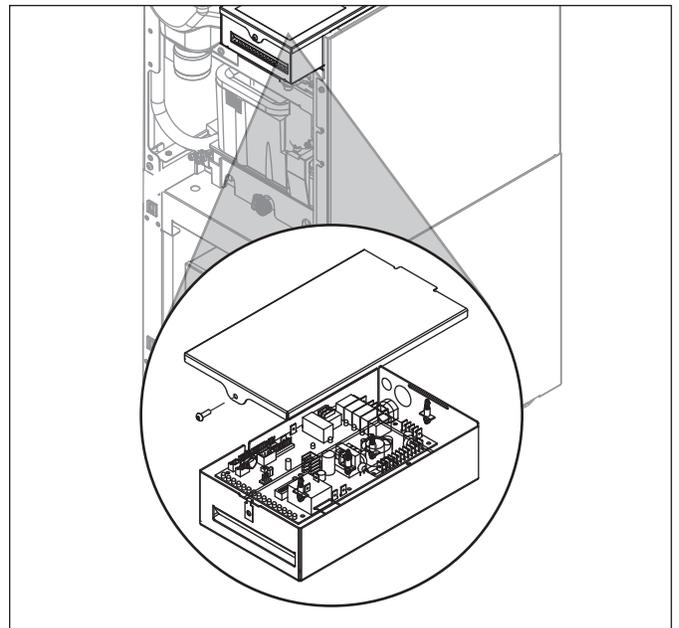


8. Locate the DIP switches on the dispenser's control board (**Fig. 8**). Use a fine-pointed object to move the Ice/Water DIP switch (DIP switch #2) and Internal filter supplied/display Fresh Filtered (DIP switch #3) to the ON position.

|                         | OFF | ON |   |
|-------------------------|-----|----|---|
| Not used (OFF position) |     |    |   |
| Ice only                |     |    | Ice & water                                       |
| No internal filter      |     |    | Internal filter supplied/display "Fresh Filtered" |
| Not used (OFF position) |     |    |   |
| Not used (OFF position) |     |    |   |
| 15 minute delay         |     |    | 30 minute delay                                   |
| Not used (OFF position) |     |    |   |
| Six-month PM enabled    |     |    | Six-month PM disabled                             |

9. Replace control board enclosure.

10. Reassemble dispenser, turn on water supply, and restore power to dispenser. Test for leaks and ensure proper dispenser operation.

**Fig. 8**

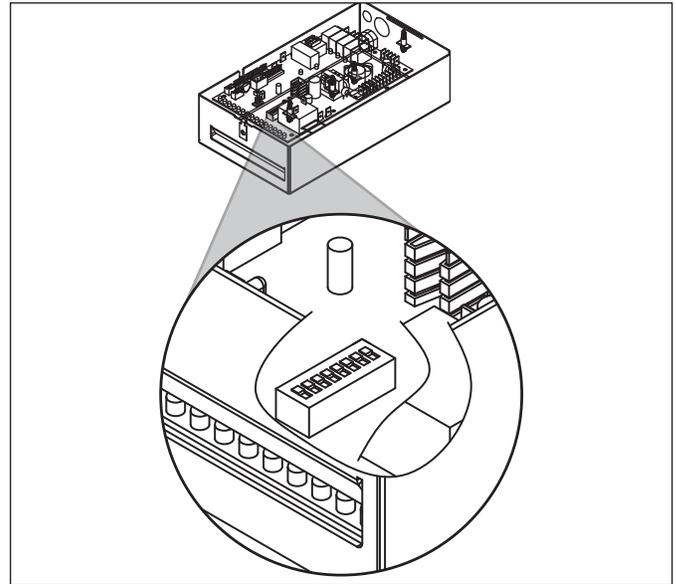





Follett is a registered trademark of Follett Products LLC, registered in US.



801 Church Lane • Easton, PA 18040, USA  
Toll free (877) 612-5086 • +1 (610) 252-7301  
[www.follettice.com](http://www.follettice.com)

00957696R01  
© Follet Products LLC 11/20