

## Quick-Start Instructions - Countertop Models

- Verify ventilation clearance:
  - If 12" (30.4 cm) or more space above, provide at least 2" (5 cm) on both sides
  - If less than 12" (30.4 cm) space above, provide at least 6" (15.3 cm) on one side
- Verify electrical
  - 115 V, 60 Hz, 1 phase
  - Minimum circuit ampacity: 15A
  - Maximum size of branch circuit overcurrent device: 15A
- Installation Specifications- ambient temp must not exceed 38C (100F)
- Installation instructions:
  - Carefully tip the unit back to expose the foot pad holes. Position foot pad over hole and press center until it is fully seated.
  - Install shelf brackets into pilasters (insert top tab, squeeze and push in lower tab). Install shelves (REF2/FZR2 only)
- Set up product simulation bottle
  - Remove bottle and its top and fill bottle with:
    - 50/50 solution of glycerine and water for refrigerators
    - 60/40 solution of glycerine and water for freezers
  - Let bottle chill in refrigerator or freezer before inserting probe
- Press power switch on (lower left rear corner) to turn unit on
- Set high and low temperature alarms
  - Press SET and UP arrows simultaneously until L1 is displayed
    - Use the UP and DOWN arrows to display AIL (low temperature alarm)
      1. Press SET to display low alarm temperature and use UP and DOWN arrows to set the alarm temperature.
      2. Press SET to accept
    - Use the UP and DOWN arrows to display AIH (high temperature alarm)
      1. Press SET to display high alarm temperature and use UP and DOWN arrows to set the alarm temperature.
      2. Press SET to accept
- If this is a keypad unit
  - You must connect the battery prior to placing the unit into service (see Operation Manual)
  - The default access code is 1-2-3-4-5-6 (ENTER)
- If desired, change Celsius/Fahrenheit display (see Operation Manual)
- If desired, recalibrate (see Probe calibration in manual)