

Touchless Dispensing Accessory with Control Board for 7 Series Ice and Water Dispensers P/N 01382167

Installation Instructions For 7 Series Units before serial number E62109 (manufactured prior to 10/19/2014)

Description

For 7 Series Units before serial number E62109, a new control board may need to be installed in order to use the Touchless Accessory.

Component List

7 Series Control Board


Installation




Except for routine cleaning and sanitizing, only qualified technicians should attempt to service or maintain this equipment.

- 1. Unplug the dispenser.
- 2. Open the electrical box to check the revision level label on the board.
- 3. A control board with a revision of V37 or lower has a stack of five relays as indicated in the drawing (next page) and requires replacement of the board to use a Touchless Dispensing Accessory Kit. Kit part number 01382167 includes a replacement control board for use on these units.
- **4.** A control board with a revision level above V37 does not require replacement. Kit part number 01362599 (no control board) is for use on these units.
- **5.** If Touchless Dispensing Accessory Kit part number 01362599 was ordered, and a replacement control board is required (part number 00958033) please contact Follett Technical Service at 877-612-5086 for assistance.

Control Board Comparison

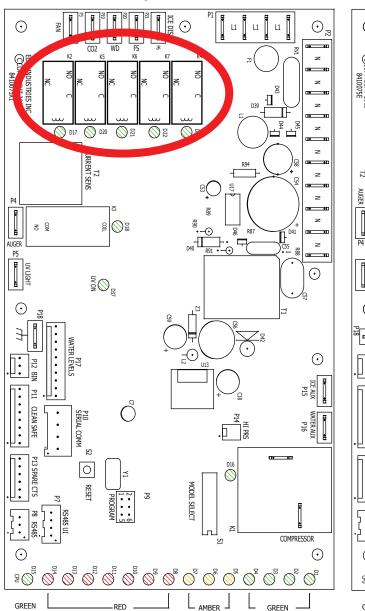

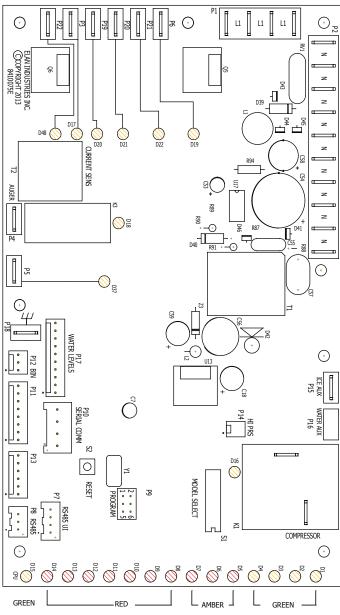

Old control board with relays (circled). Board must be replaced.

Current control board without relays.

