

Prefilter Kit for Bacterial-Retentive Filter System P/N 01288034 and 01288042

Instructions

Before you begin


If you experience any problems during the installation, please call Follett Technical Service toll-free at (877) 612-5086 for assistance.

Materials supplied

- Housing, filter, 10" drop-in (P/N 01096429)
- Fitting, 1/2" NPT X 3/8" COMP (2) (P/N 01233667)
- Tube, 20" braided SS water, 3/8 X 3/8 (P/N 01042597)
- Prefilter, Carbon and Scale, 10" Cartridge (P/N 01288059) OR
- Prefilter, Scale Inhibitor, 10" Cartridge (P/N 01288067)

Tools/materials required

- Screw driver/cordless drill
- Adjustable wrenches
- Safety glasses and protective gloves
- Mounting hardware (refer to State and local building code)

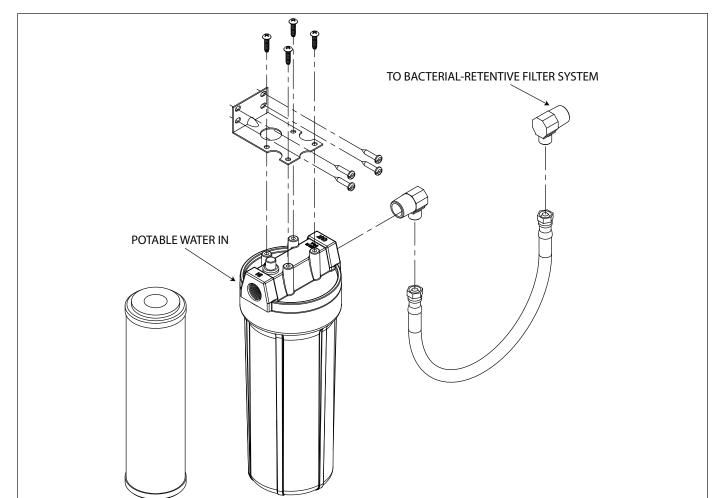

Procedure


Note: Incoming water pressure must be 30–70 psi.

- 1. Install the filter housing and bracket (Fig. 1.1) using the instructions shipped with the unit. Note: Allow an additional 3" below to allow for easy filter replacement.
- 2. Insert the prefilter into the bowl and reattach the bowl.

Note: Filter bowl is hand-tightened only.

- 3. Install one 1/2" NPT X 3/8" compression fitting to the filter housing outlet (Fig. 1.2).
- **4.** Install the other 1/2" NPT X 3/8" compression fitting to the potable water inlet of the bacterial-retentive system (Fig. 1.3).
- 5. Attach the braided hose to both compression fittings (Fig. 1.4).

Fig. 1

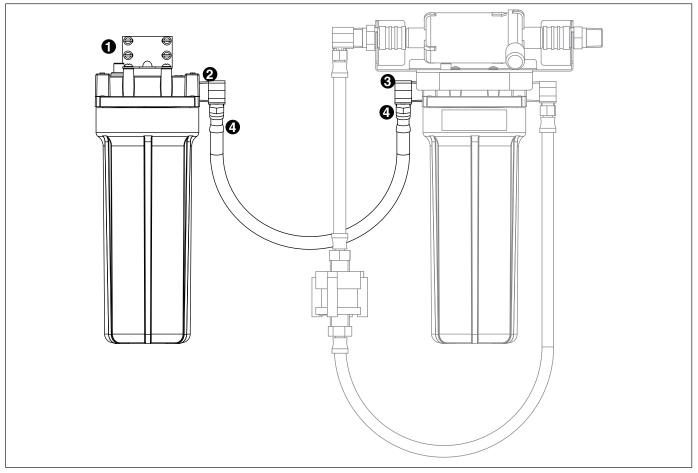

Follett is a registered trademark of Follett LLC, registered in US.

