
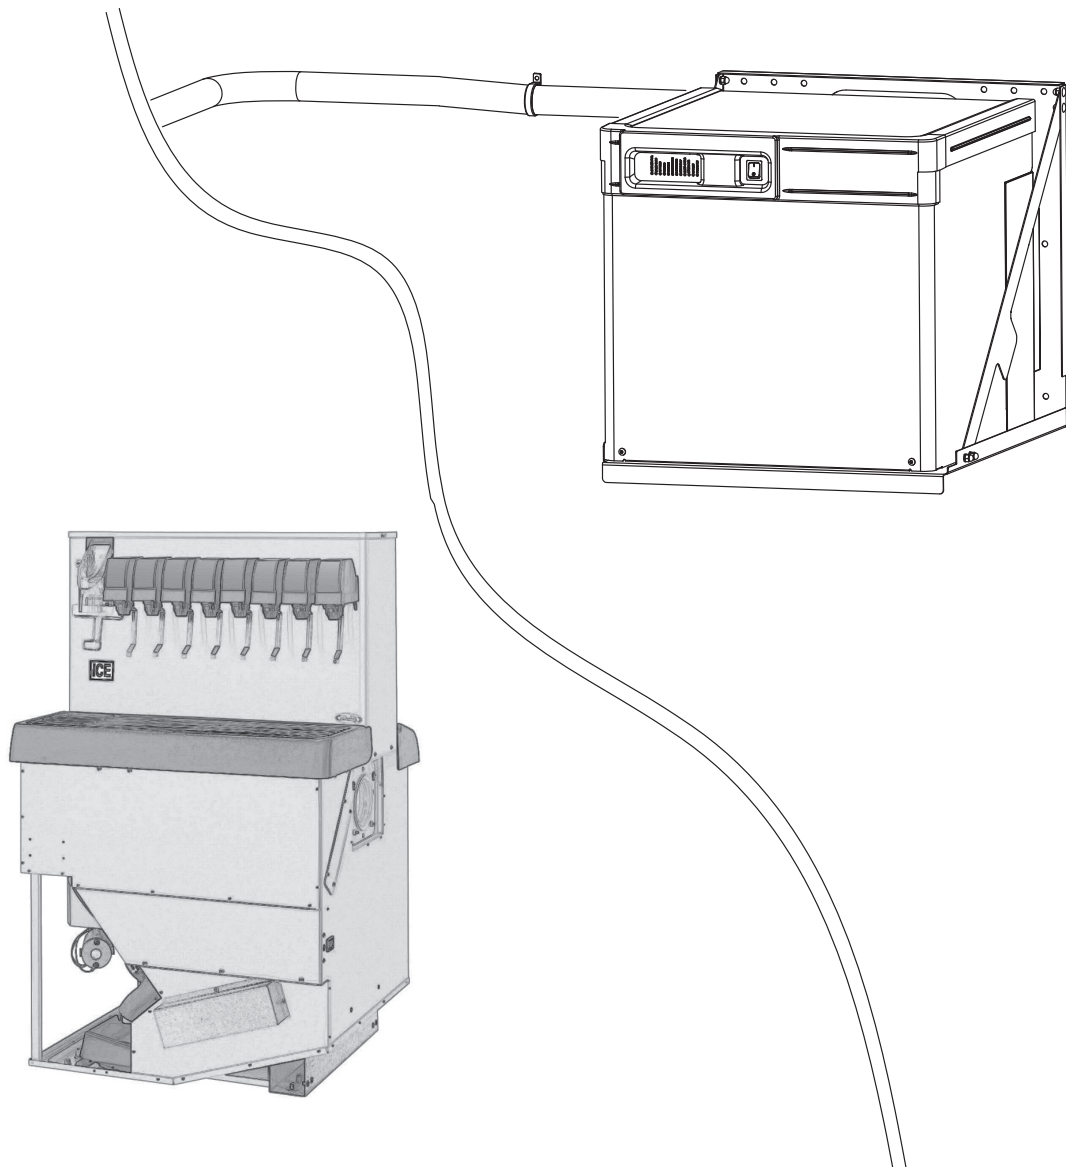


Horizon Elite™ Ice Machine Models with RIDE™ Technology Installation Instructions for Cornelius PR150

HCD/HMD/HCF/HMF1010RPS, HCD/HMD/HCF/HMF1410RPS,
HCD/HCF1010NPS, HMD1410NPS
(See model number configurator on page 2 for details.)









After Serial Number L82638

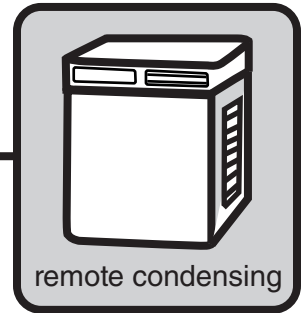

Chewblet® Ice Machine Model Number Configurations

<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px 5px;">HC</div> <div style="border: 1px solid black; padding: 2px 5px;">D</div> <div style="border: 1px solid black; padding: 2px 5px;">1810</div> <div style="border: 1px solid black; padding: 2px 5px;">A</div> <div style="border: 1px solid black; padding: 2px 5px;">V</div> <div style="border: 1px solid black; padding: 2px 5px;">S</div> </div>					
Icemaker	Voltage	Series	Condenser	Application	Configuration
MC Maestro™ Chewblet® (425 Series)	C 208-230/60/1 (icemaking head) <i>Self-contained only.</i>	425 up to 425 lbs (193 kg)	A Air-cooled, self-contained W Water-cooled, self-contained	V Vision™ H Harmony™	S RIDE™ (RIDE remote ice delivery equipment)
HC Horizon Chewblet (710, 1010, 1410, 1810, 2110 Series)	D 115/60/1 (icemaking head) <i>Self-contained and remote. If remote unit, high side is 208-230/60/1.</i>	710 up to 675 lbs (306 kg)	R Air-cooled, remote condensing unit N Air-cooled, no condensing unit for connection to parallel rack system	B Ice storage bin J Drop-in M Ice Manager™ diverter valve system P Cornelius Profile PR150	T Top-mount
HM Horizon Micro Chewblet™	E 230/50/1 (icemaking head) <i>Self-contained only.</i> F 115/60/1 (icemaking head) <i>Remote only. High side is 208-230/60/3.</i>	1010 up to 1061 lbs (482 kg) 1410 up to 1466 lbs (665 kg) 1810 up to 1790 lbs (812 kg) 2110 up to 2039 lbs (925 kg)			

Read and complete the following 8 installation steps

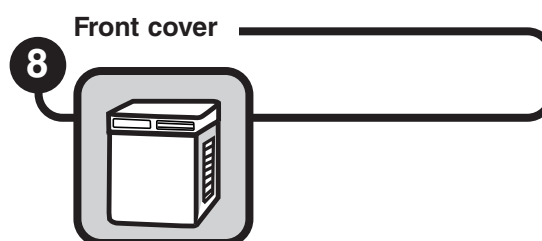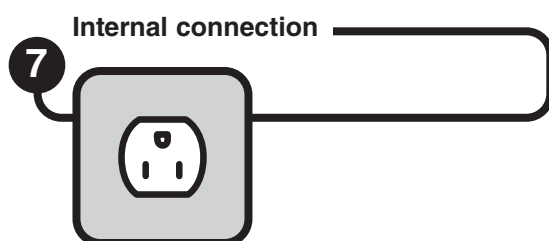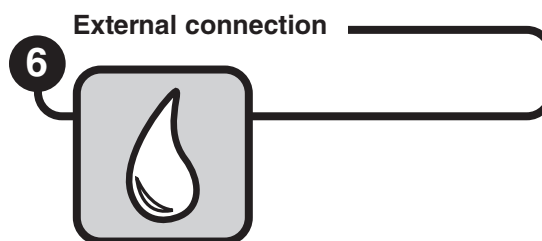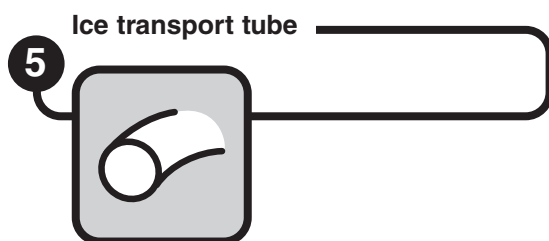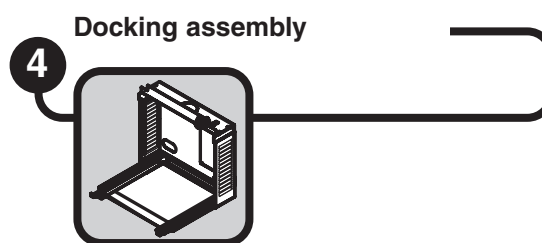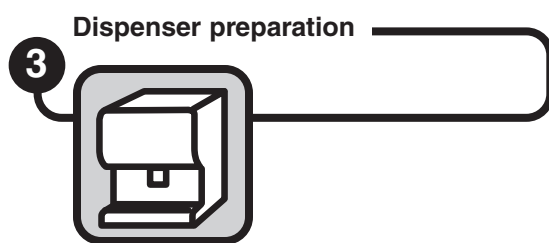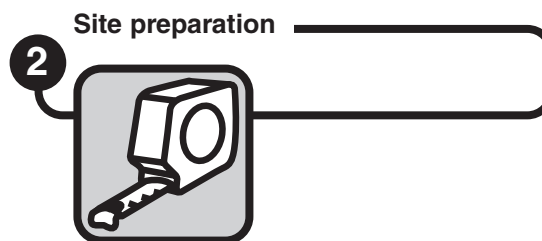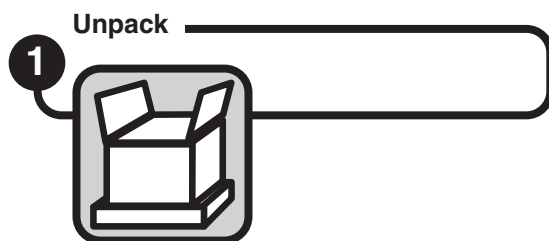


Carefully unpack and inspect the contents of your Follett ice machine.

Unpack


1




1.1 Unpack ice machine

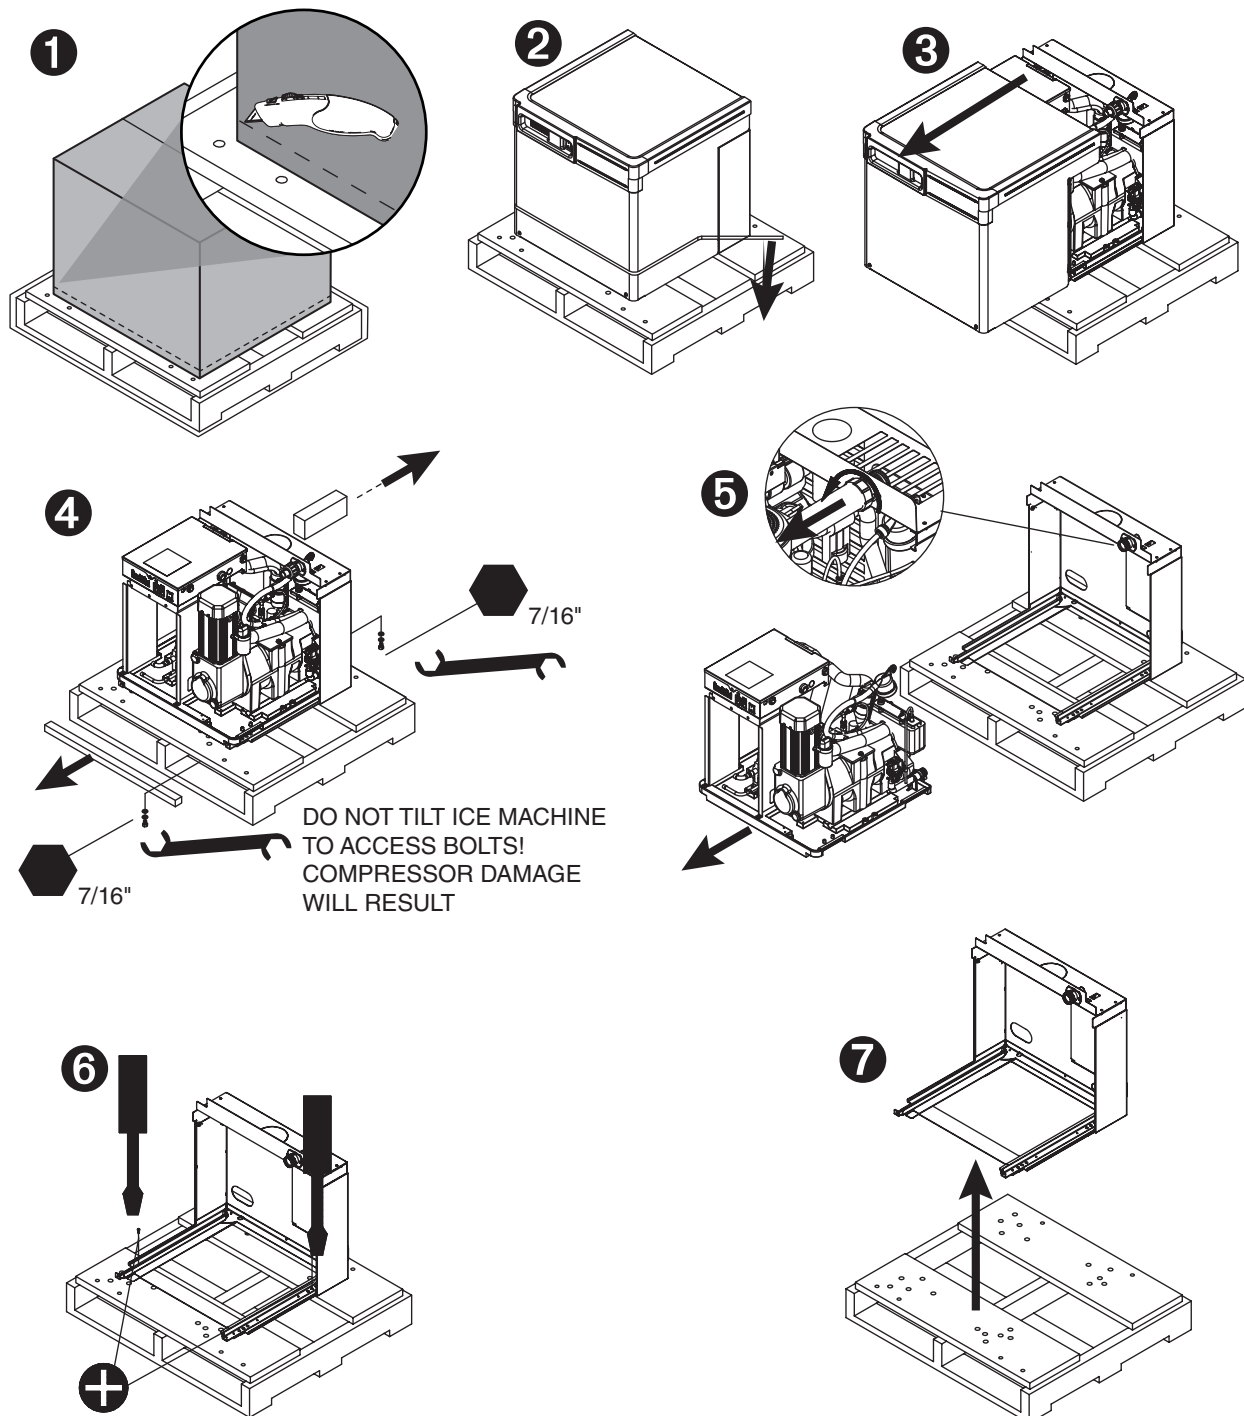

Provide drainage, water supply and electrical power to within 6 feet (2m) of ice machine in accordance with local and national codes. Outdoor installation of low side is not recommended and will void warranty.

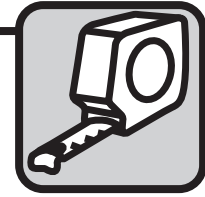

2.1 Installation site requirements

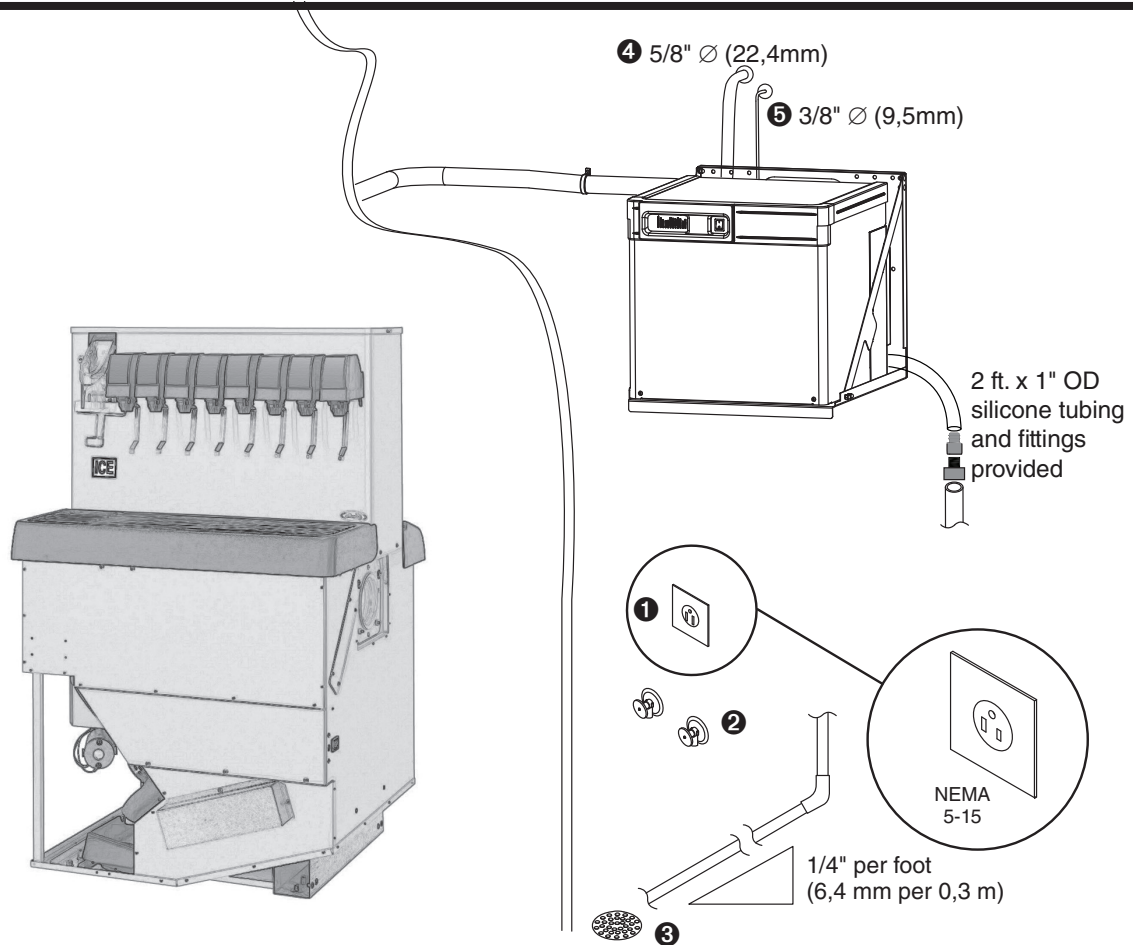

Electrical ①

- 120/60/1-5 amps

Potable water supply ② (3/8" push-in internal connection, 3/8" OD tubing required)

- 10–70 psi (69–483 kpa)
- 45–90 F (7–32 C)
- Follett recommends the use of an in-line water filtration system (item# 00130286)
- This equipment is to be installed with adequate backflow protection to comply with applicable federal, state, and local codes

Drain ③ (3/4" Barb)


- Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m).

Refrigeration lines ④

- 5/8" Ø (15,8 mm) diameter suction line (insulated) ④
- 3/8" Ø (9,5 mm) liquid line ⑤




3.1

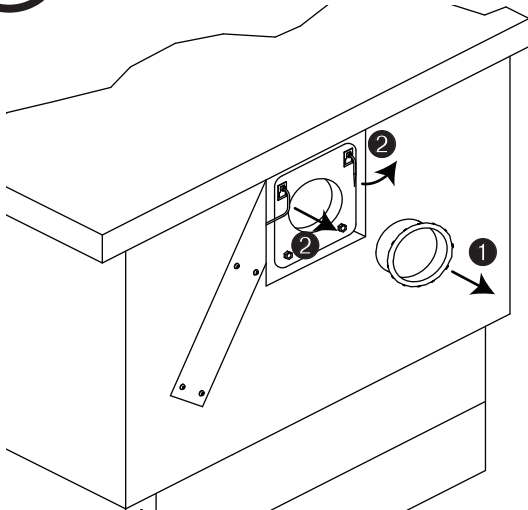


- Remove ice entry cover plate **1**
- Remove bin thermostat capillary tube from bracket **2**

3.2

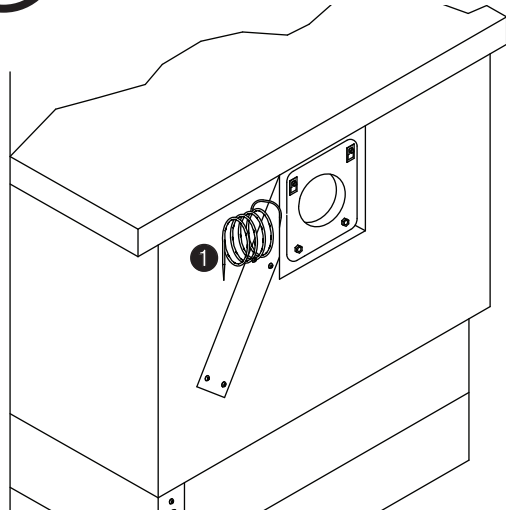


- Coil capillary tube and secure away from bin fill opening **1**

3.3

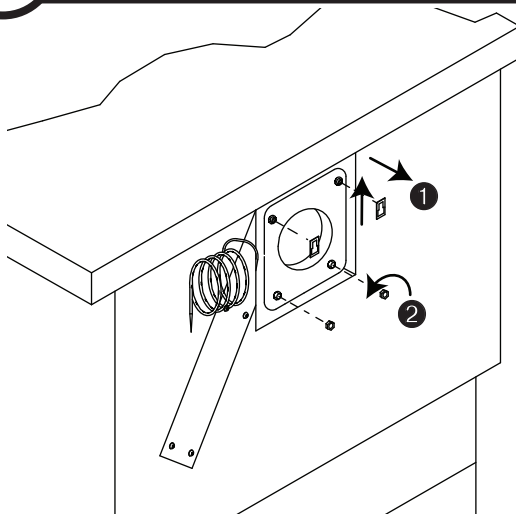


- Remove retaining clips **1** and deflector nuts **2**

3.4

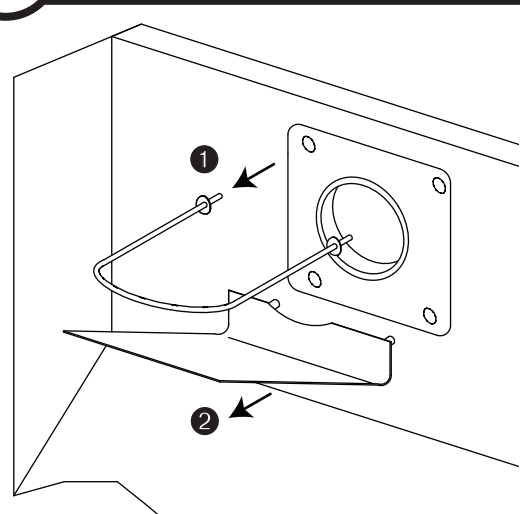


- Remove capillary tube bracket **1** and deflector **(Fig. 4.2)** from inside ice storage hopper **2**

3.5

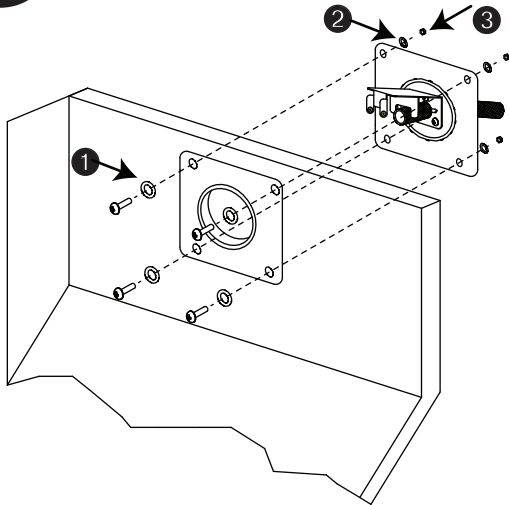


- Mount cover plate/transport tube assembly on outside of dispenser using screws, flat washers **1**, lock washers **2** and nuts provided **3**

3.6

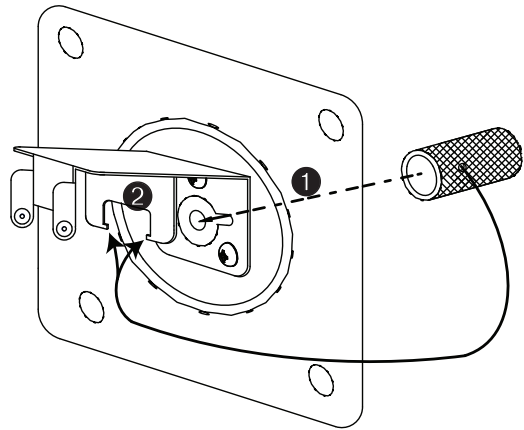


- Insert end of ice transport tube (with retaining holes) through hole in center of cover plate assembly **1**
- Secure ice transport tube (holes) to retaining tabs on bracket **2**

3.7

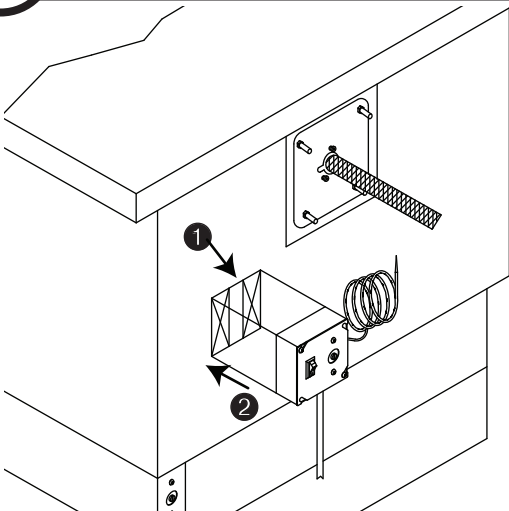


- Thoroughly clean outer wall of dispenser in area indicated **1**
 - Peel backing from adhesive and mount bin thermostat box to dispenser wall **2**
- Note:** Once adhesive on thermostat box contacts dispenser cabinet it can not be re-positioned.

3.8

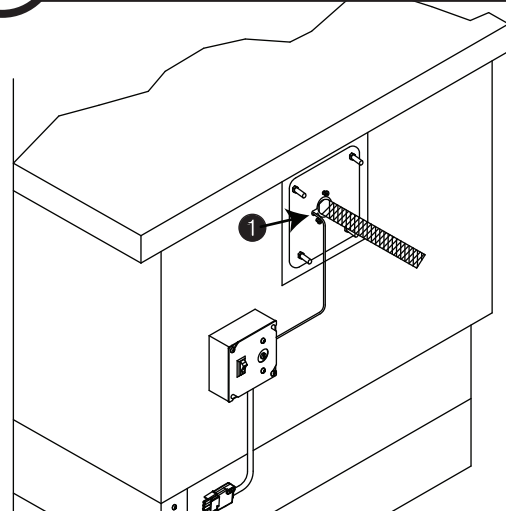


- Insert bin thermostat capillary tube through hole in gasket as indicated **1**

3.9

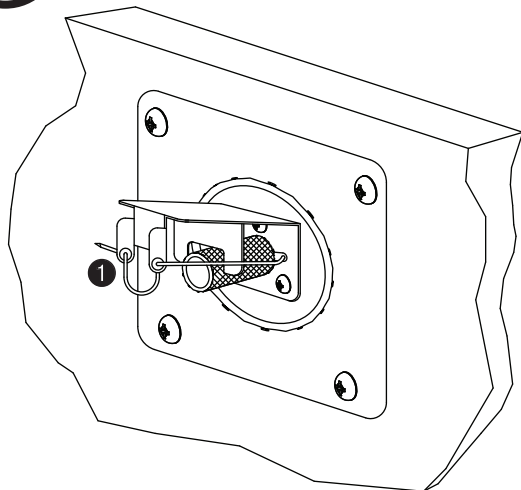

- Route thermostat capillary tube through mounting bracket grommets as shown ①


3.10

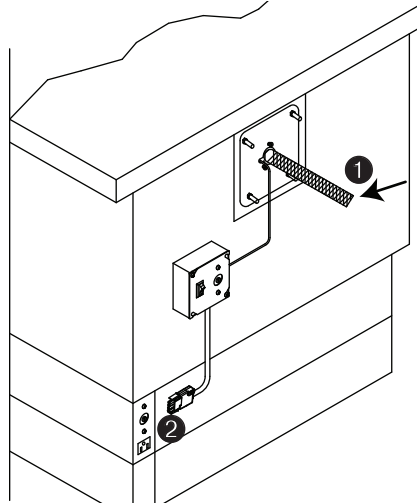

- Insulate entire length of ice transport tube ① and route to icemaker in accordance with directions in Horizon installation instructions
- Route bin signal wire to icemaker ②



BEFORE PROCEEDING

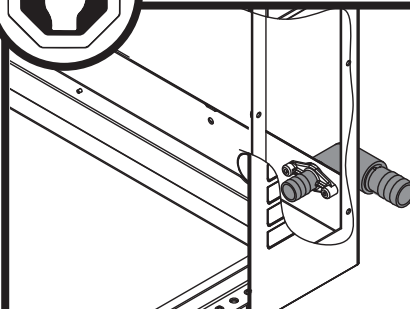


Prior to installing the docking assembly, ensure that the drain fitting is oriented (right or left) correctly for your installation. An optional straight drain fitting is also supplied. You may need to remove the back panel of the docking assembly in order to re-orient or change the drain fitting. Replace back panel prior to mounting the docking assembly.

Install the docking assembly.




WARNING

- Docking station must be secured in accordance with these instructions to ensure ice machine stability.
- Ventilation openings in the docking station should be clear of obstruction

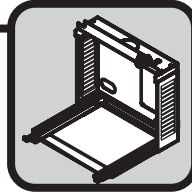


Wall bracket accessory

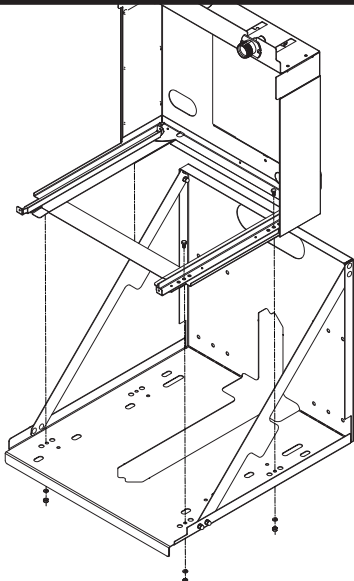


- Mount docking assembly to wall bracket accessory

Machine stand accessory

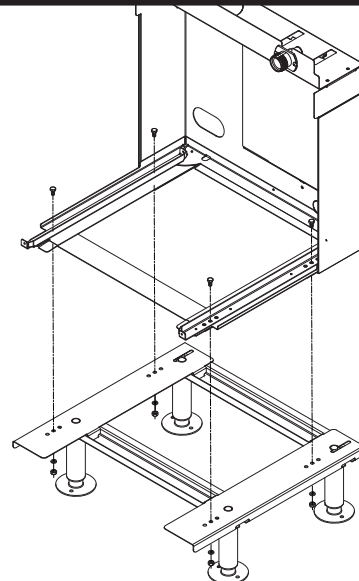


- Mount docking assembly to machine stand accessory

4.1 Docking assembly

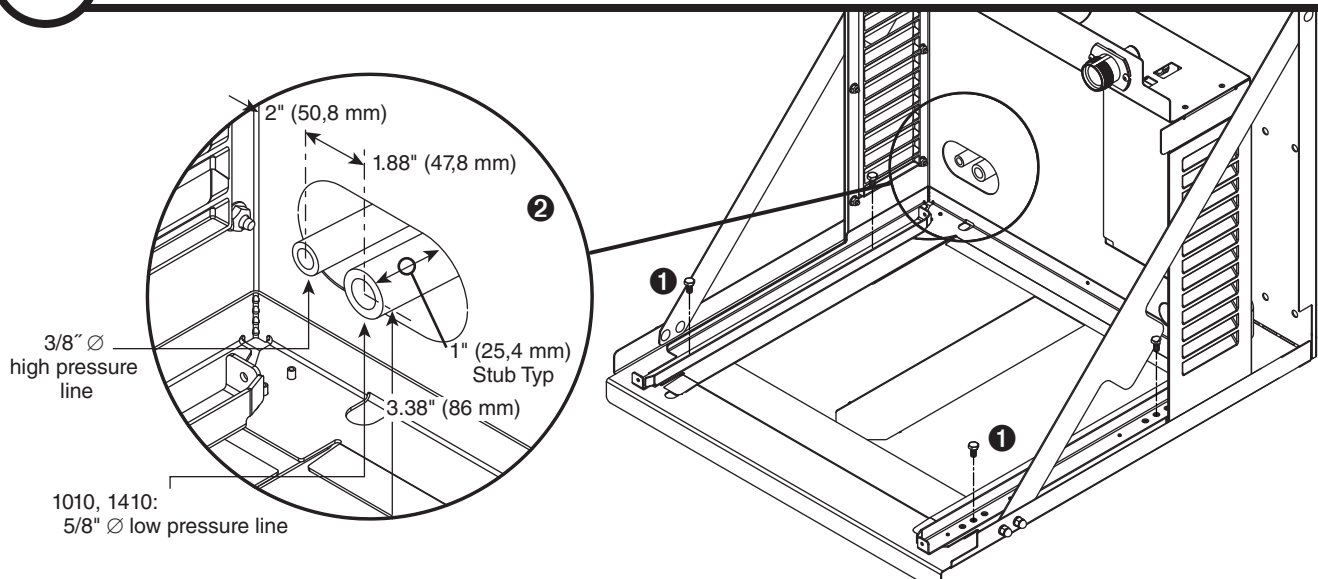

- Mount docking assembly ①
- "Rough-in" the refrigerant piping ②

4.2 Undercounter installation requirements

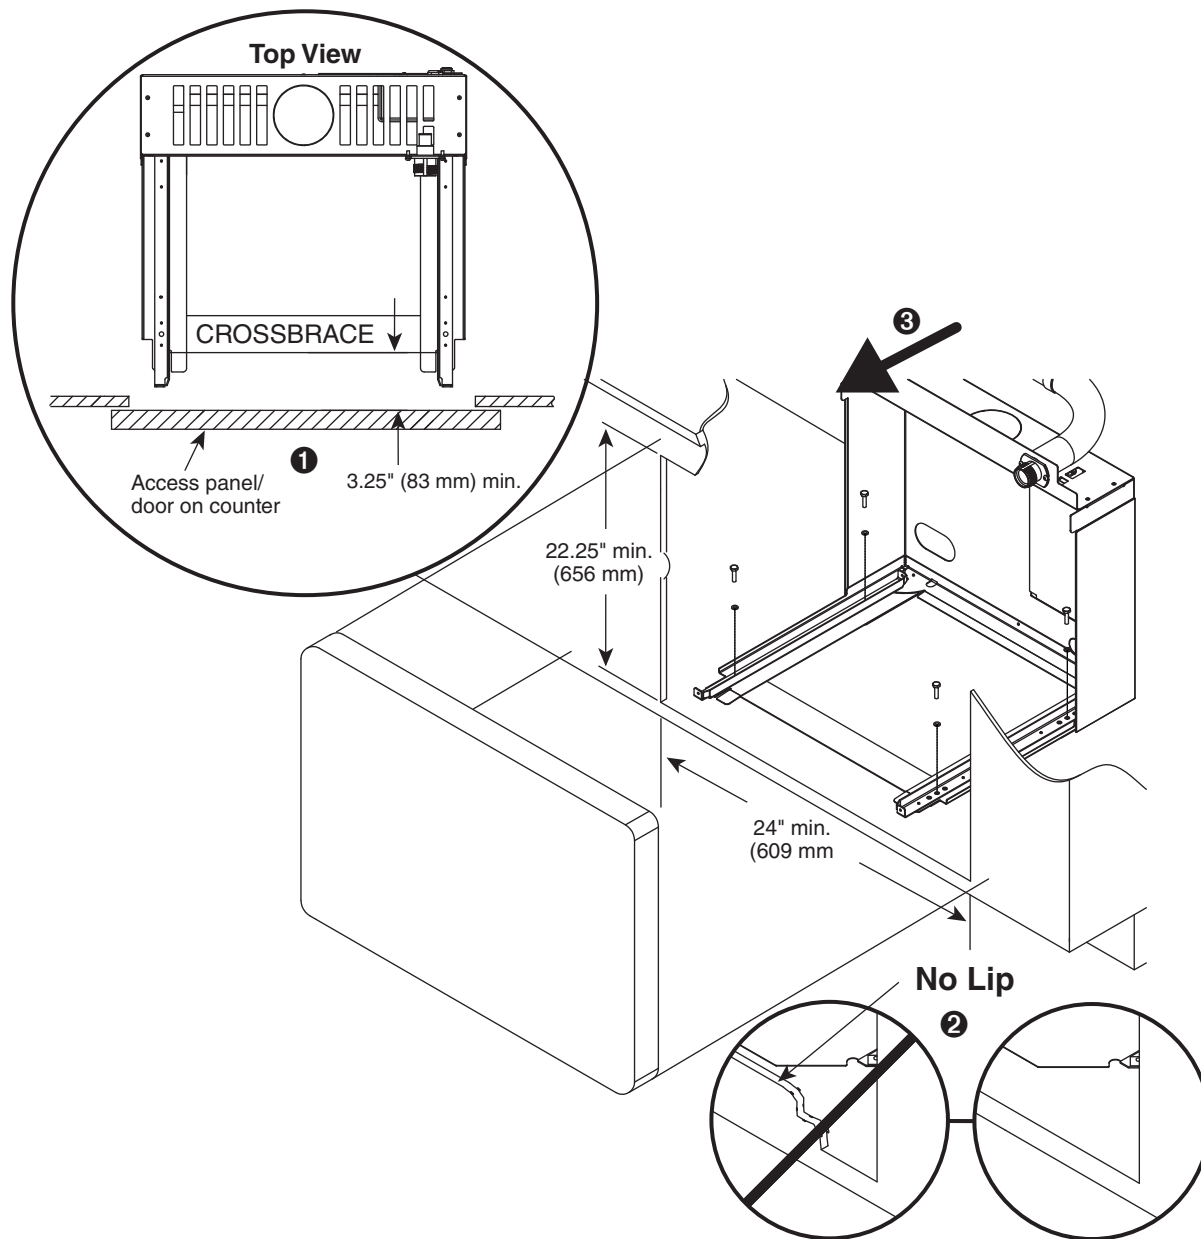


DOCKING STATION

- Prior to installing the docking assembly, ensure that the drain fitting is oriented (right or left) correctly for your installation. An optional straight drain fitting is also supplied. You may need to remove the back panel of the docking assembly in order to re-orient or change the drain fitting. Replace back panel prior to mounting the docking assembly.
- Position and screw docking assembly to the bottom of counter inside of access panel/door min. of 3.25" (83 mm) from the front edge of the cross brace **1**
- The mounting surface for the docking assembly must be solid. Do not mount directly onto runners or channels.
- There must be no lip or edge that would hinder the ice machine from sliding in or out of the docking station **2**
- Ice machine must be installed facing forward as shown for service accessibility **3**



5.1 Ice transport tube installation from dispenser to ice machine

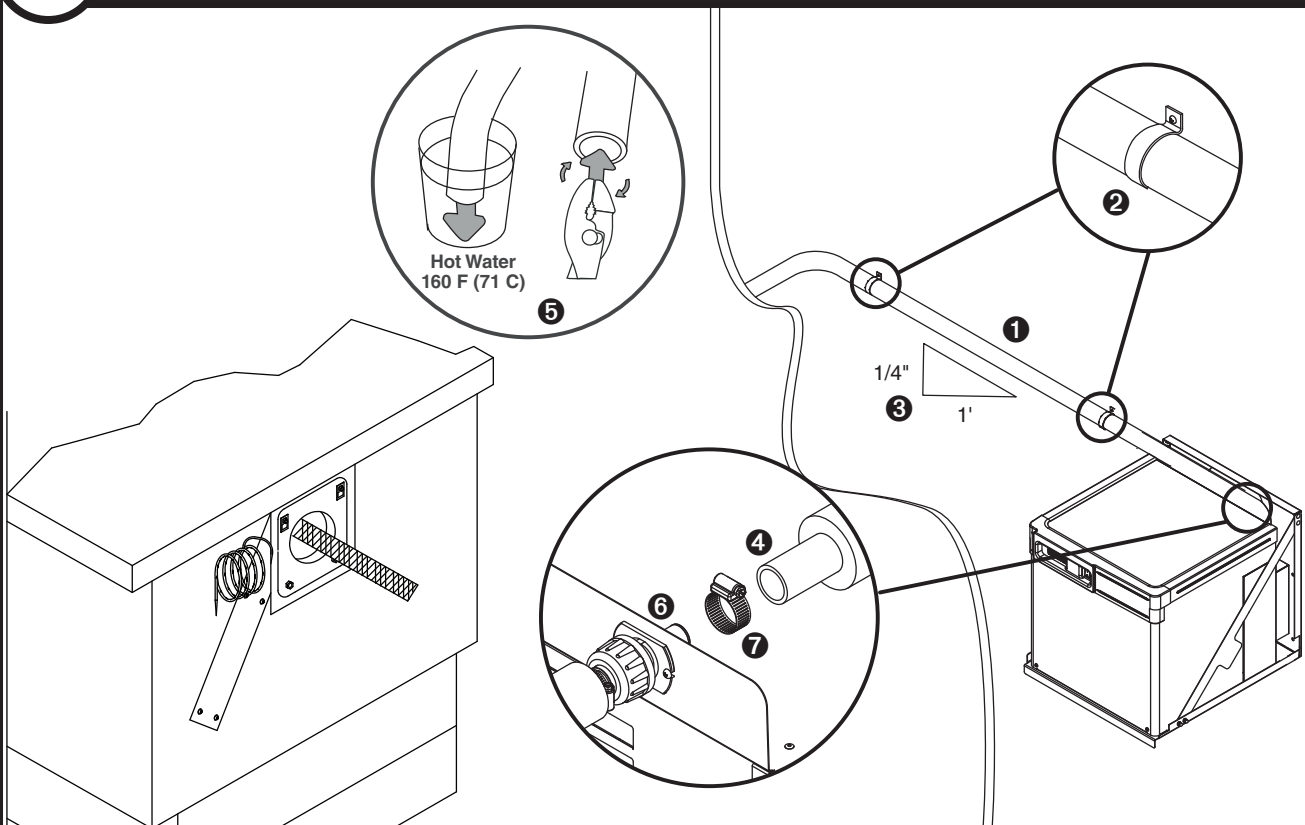

Ice transport tube tips


- Insulate entire length of ice transport tube ①
- Secure ice transport tube ② as needed to prevent dips and traps from forming. For long tube runs see guide on page 14.
- Pitch ice transport tube at least 1/4" per foot (6,4 mm/0,3 m) ③
- Ice transport tube must drain towards ice machine

Ice transport tube to Ice machine

- Be sure tube ends are square ④
- Heat end of transport tube in cup of 160 F (71 C) hot water to soften and spread with pliers ⑤ before making connection to ease assembly
- Push ice transport tube onto ice machine nipple ⑥
- Install hose clamp ⑦



6.1 Bin Signal Installation

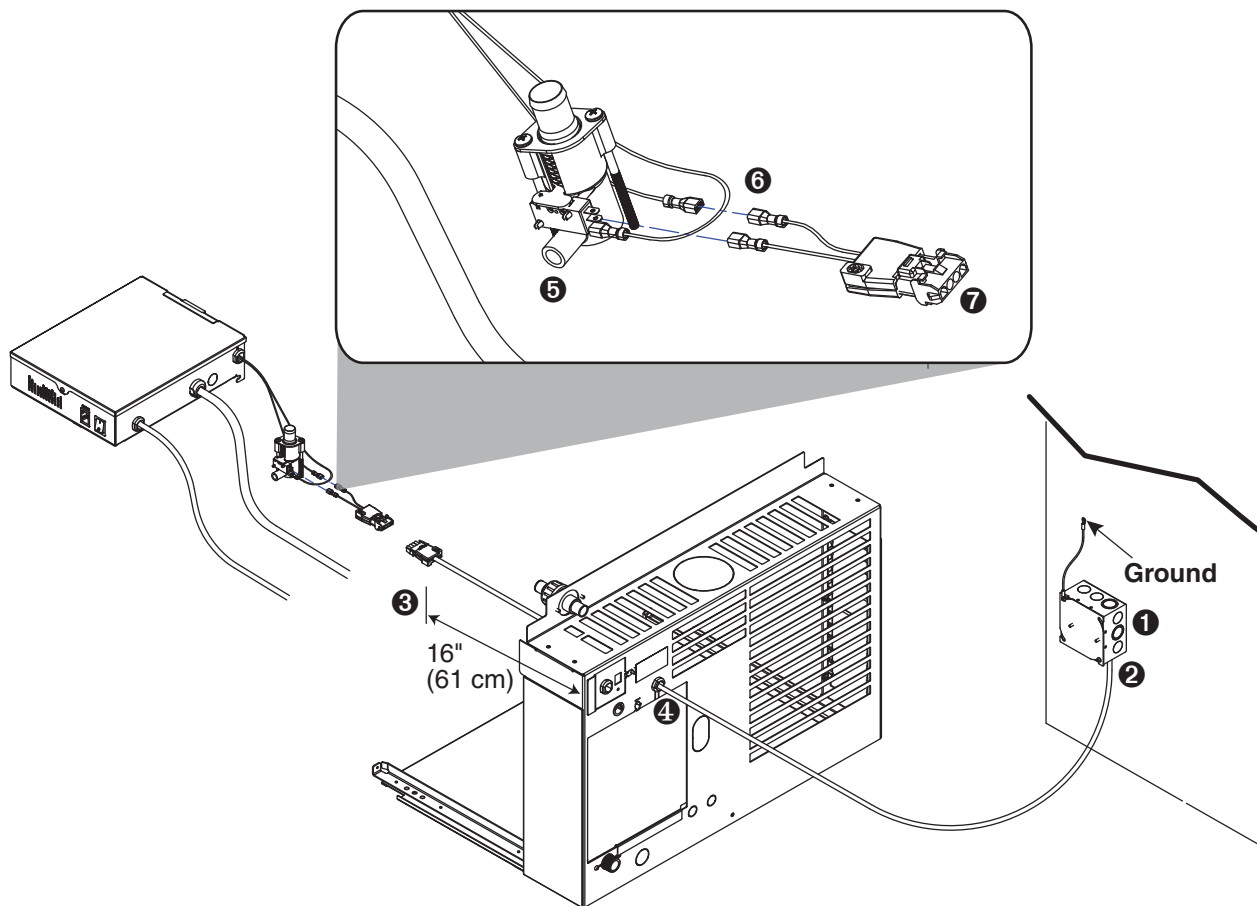


- Mount the electrical box to the side of the Vision dispenser **1** to establish a ground connection.
Note: If a 4 x 4 box is mounted to a non-grounded surface, connect ground wire at an appropriate ground.
- Connect the bin signal cord to the plug on the electrical box. **2**
- Insert 16" (61 cm) of the long bin signal cable **3** into the hole in the back of the docking station **4** and secure in place with strain relief provided.
- After sliding the ice machine module into the docking station, disconnect one wire from shuttle switch and replace with wire from adapter plug. **5**
- Connect wire removed from shuttle switch to male connector on adapter plug wire. **6**
- Complete normal installation procedure for the ice machine using the installation manual that shipped with the ice machine.
- Connect adapter plug into bin signal plug. **7**

Connect utilities to docking assembly.



7.1 Water and drain

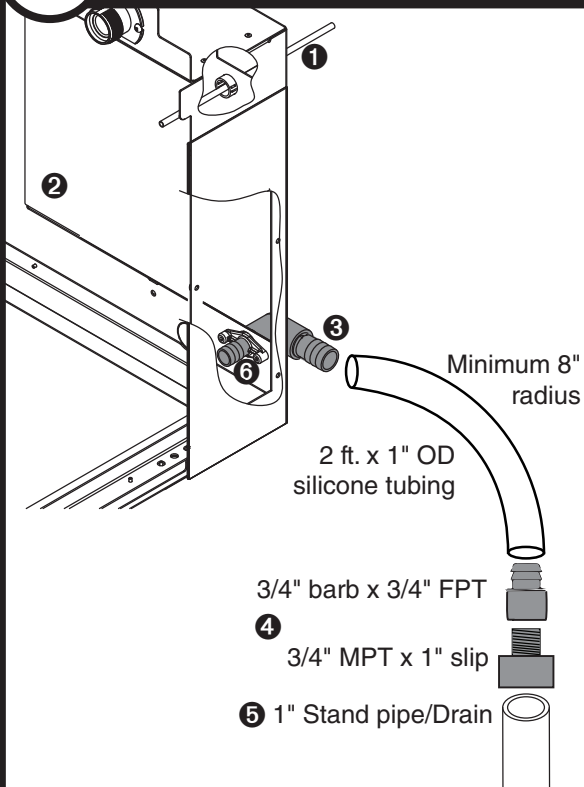


- Rough-in ice machine potable water supply **1**.
3/8" push-in connection will be made at shut-off valve inside machine
- Remove access panel if necessary **2**.
- Connect the silicone tubing to the ice machine 3/4" drain barb **3**.
- Assemble the 3/4" barb x 3/4" FPT to the 3/4" MPT x 1" slip. Connect the other end of the silicone tubing to the 3/4" barb **4**.
- Connect the 1" slip fitting to the 1" stand pipe/drain **5**.

Note: Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4 mm/0,3 m).

- Apply Petrol-gel to barbed drain fitting **6**
- Replace access panel.


7.2 Refrigerant lines

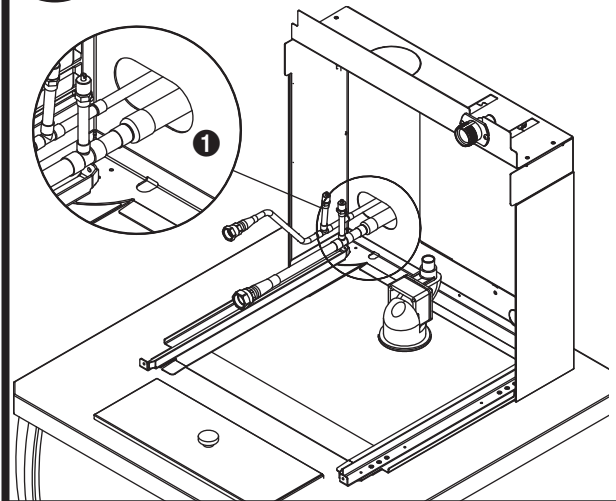

- Braze supplied quick-connect lines onto stub-ins **1**.




8.1 Ice transport tube installation

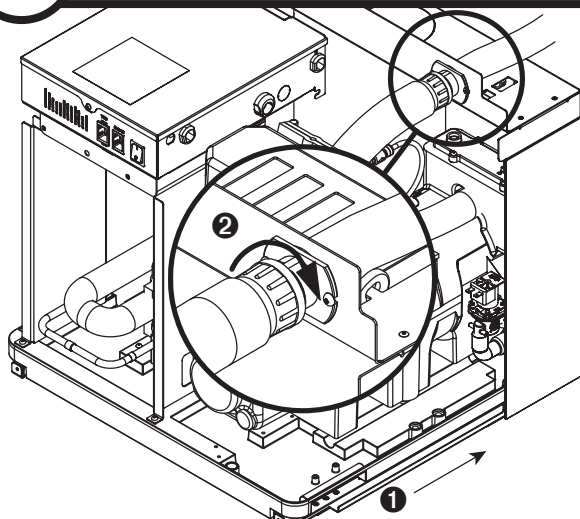


- Slide ice machine into docking assembly ensuring that drain tube is fully seated on barbed drain fitting **1**
- Insert ice transport tube all the way into coupling and tighten nut firmly **2**

8.2 Water line

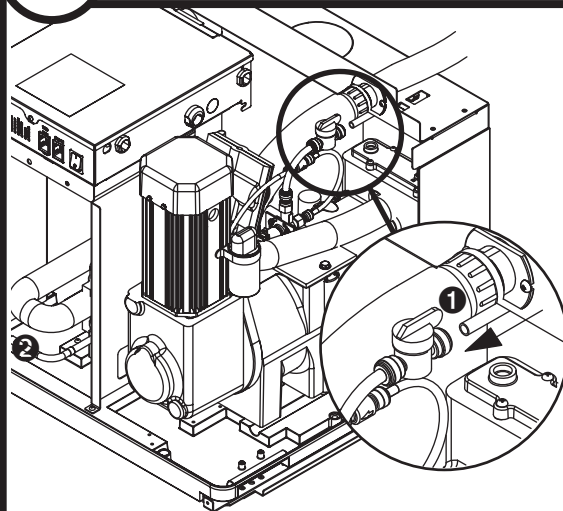


- Insert potable water line into valve **1**

8.3 Refrigeration lines

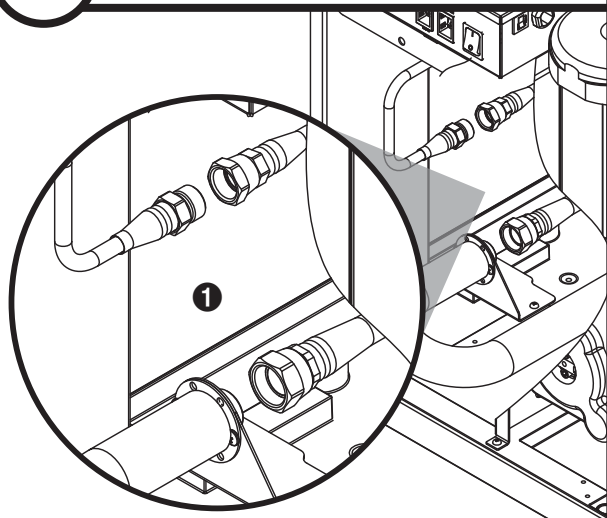


- Evacuate line set.
- Connect self-sealing liquid and suction line fittings **1**

8.4 Power cord

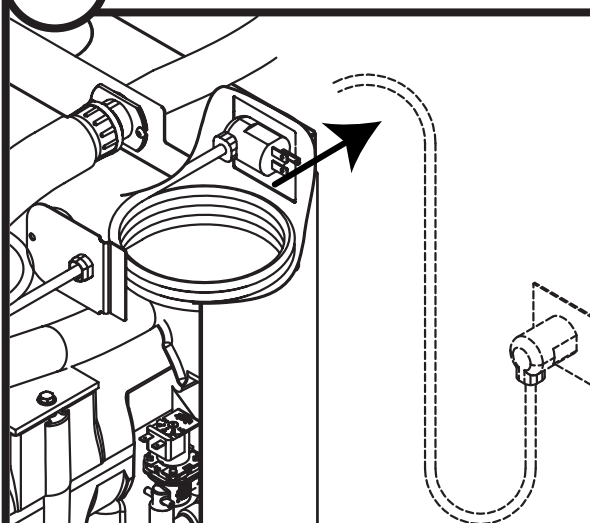


- Remove twist tie
- Carefully pass cord through opening and plug into wall outlet

8.5 Power cord

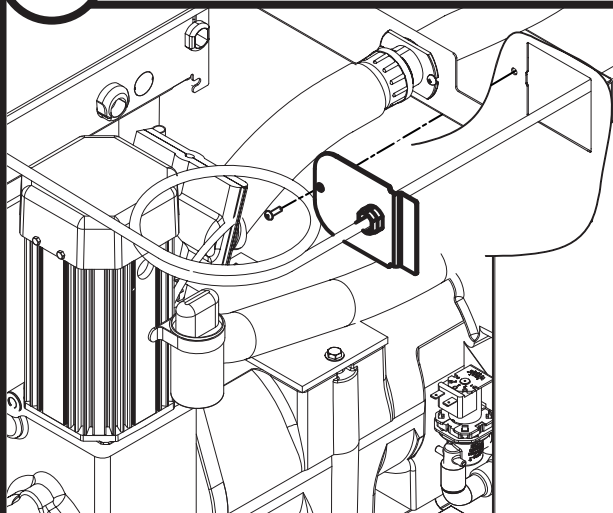


- Position plate into opening and secure with supplied screw


8.6 TDS switch

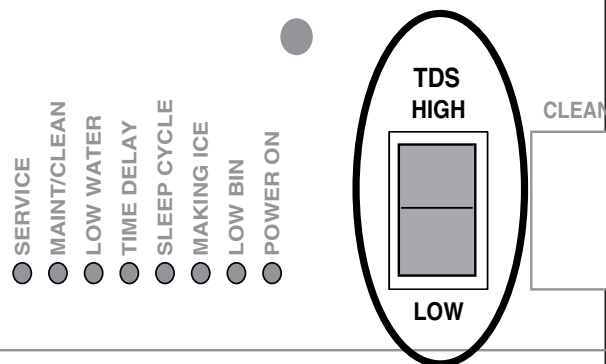

- Set the TDS switch on the electrical box:
HIGH: for extended service life
LOW: for low-scale water

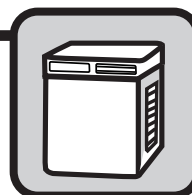


9.1 Install condensing unit

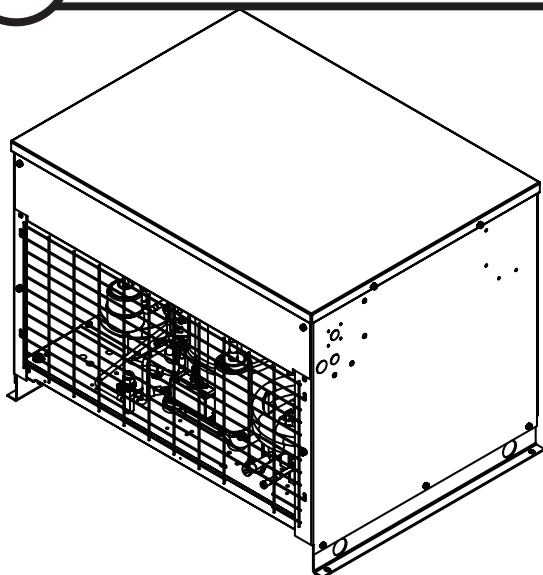

- Complete installation of condensing unit or connection to rack system.
- Required rack system capacity at 0 F (-18 C) evaporator (EPR supplied by installer).
1010N: 7,700 Btu/hr (1940 kcal/hr)
1410N: 10,000 Btu/hr (2519 kcal/hr)

9.2 Install ice machine front cover

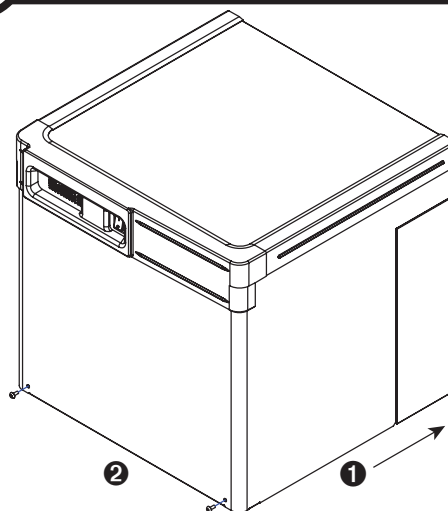


- Slide ice machine cover over machine ①
- Insert and tighten two screws through cover and into docking assembly ②

NOTICE

Ice machine MUST be sanitized prior to operation!

Consult Operation and Service Manual provided with ice machine for sanitizing instructions.

Long tube run recommendations

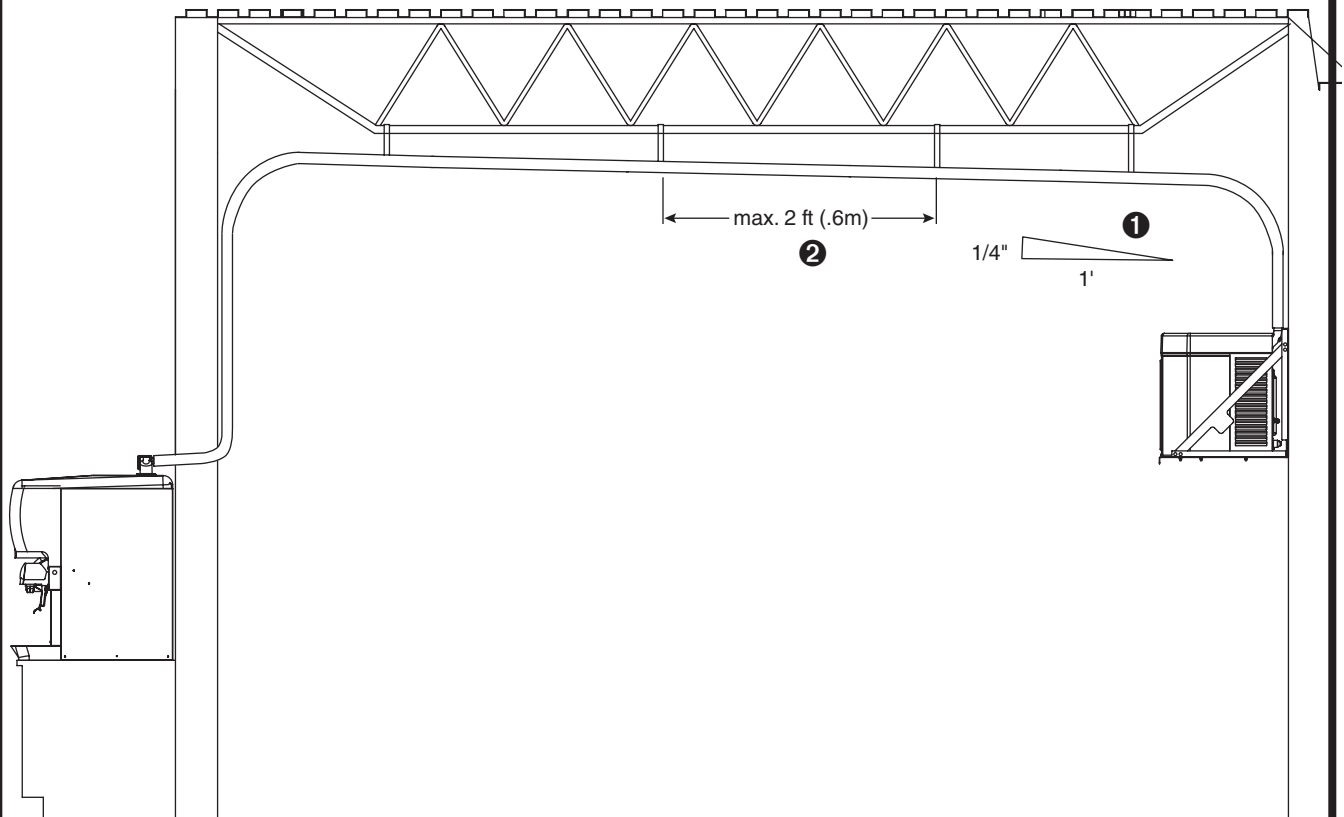

- Pitch ice transport tube to allow melt water to drain towards ice machine ①
- Secure insulated ice transport tube at least every 2 ft (0,6 m) to prevent dips or traps ②

Maestro, Micro Chewblet, Vision, Harmony, Ice Manager, Horizon, Horizon Elite are trademarks of Follett Products LLC.
Chewblet, RIDE, Follett are registered trademarks of Follett Products LLC.



801 Church Lane • Easton, PA 18040, USA
Toll free (877) 612-5086 • +1 (610) 252-7301
www.follettice.com



01113273R02
© Follett LLC 11/20