
Horizon Elite™ Ice Machine Models with RIDE™ Technology Installation Instructions for Ice Storage Bins

HCD/HMD/HCF/HMF1810RBS, HCD/HMD/HCF/HMF2110RBS HCD/HMD1810NBS, HCD/HMD2110NBS (See model number configurator on page 2 for details.)

Order parts online www.follettice.com



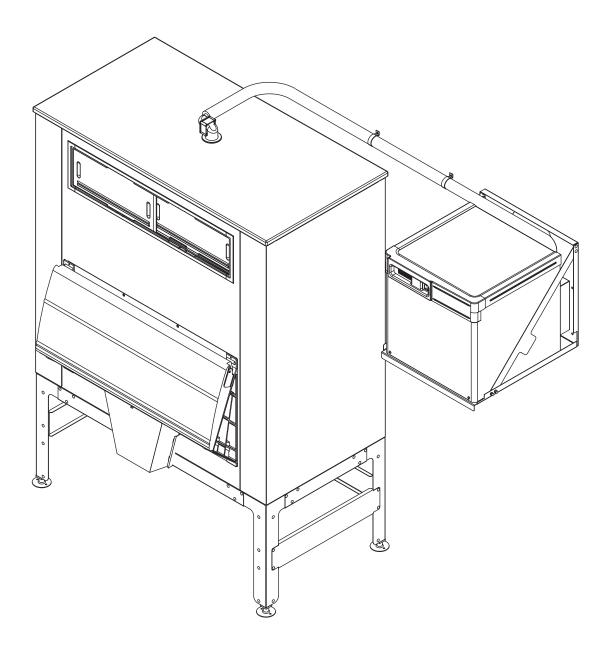


Chewblet® Ice Machine Model Number Configurations

HC D 1810 A V S					
Icemaker	Voltage	Series	Condenser	Application	Configuration
MC Maestro™ Chewblet® (425 Series) HC Horizon Chewblet (710, 1010, 1410, 1810, 2110 Series) HM Horizon Micro Chewblet	C 208-230/60/1 (icemaking head) Self-contained only. D 115/60/1 (icemaking head) Self-contained and remote. If remote unit, high side is 208-230/60/1. E 230/50/1 (icemaking head) Self-contained only. F 115/60/1 (icemaking head) Remote only. High side is 208-230/60/3.	425 up to 425 lbs (193 kg) 710 up to 675 lbs (306 kg) 1010 up to 1061 lbs (482 kg) 1410 up to 1466 lbs (665 kg) 1810 up to 1790 lbs (812 kg) 2110 up to 2039 lbs (925 kg)	A Air-cooled, self-contained W Water-cooled, self-contained R Air-cooled, remote condensing unit N Air-cooled, no condensing unit for connection to parallel rack system	V Vision™ H Harmony™ B Ice storage bin J Drop-in M Ice Manager diverter valve system P Cornelius Profile PR150	S RIDE™ (RIDE remote ice delivery equipment) T Top-mount

CAUTION!


- This appliance should be connected by a qualified person in accordance with applicable codes.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- · Connect to potable water supply only.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used for household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

Read and complete the following 8 installation steps

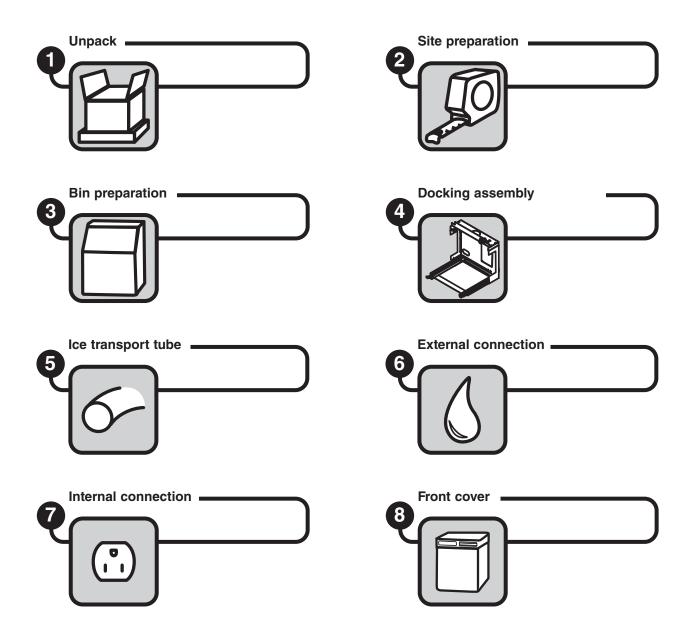

Carefully unpack and inspect the contents of your Follett ice machine.




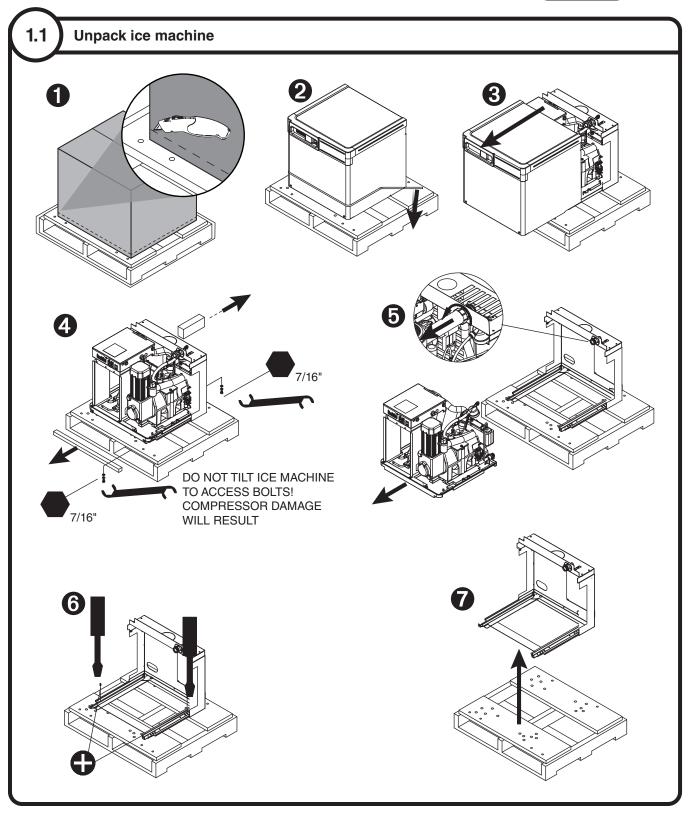

Prepare the installation site.

Provide drainage, water supply and electrical power to within 6 feet (2m) of ice machine in accordance with local and national codes. Outdoor installation of low side is not recommended and will void warranty.



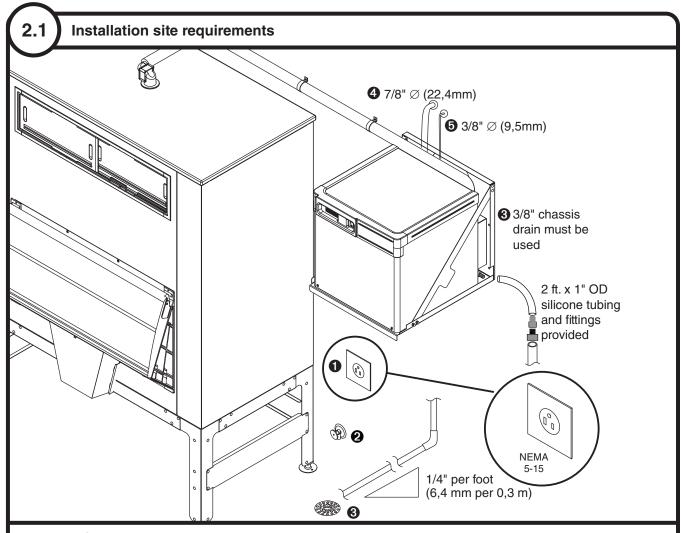

Electrical 1

• 120/60/1-5 amps

Potable water supply **2** (3/8" push-in connection, 3/8" OD tubing required)

- 10-70 psi (69-483kpa)
- 45-90 F (7-32 C)
- Follett recommends the use of an in-line water filtration system (item# 00130286)
- This equipment is to be installed with adequate backflow protection to comply with applicable federal, state, and local codes

Drains: 3 3/4" Barb for silicone drain, 3/8" push-to-connect for chassis drain


• Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m).

Refrigeration lines 4

- 7/8" Ø (22,4 mm) diameter suction line (insulated) 4
- 3/8" Ø (9,5 mm) liquid line **⑤**




3.1 Bin top preparation

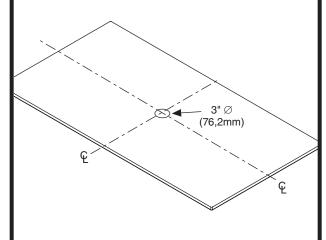


- Locate center of bin top
- Cut 3" (77,2mm) diameter hole in bin top

Bin top preparation

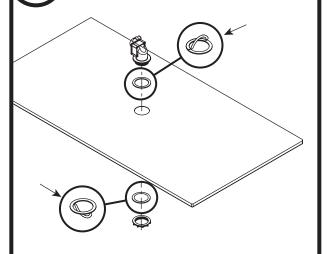


 Remove protective tape from gaskets



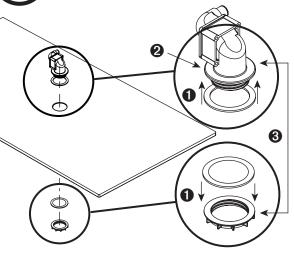


- Apply gaskets 1
- Install shuttle actuator 2 through top of bin and secure with locking nut 3

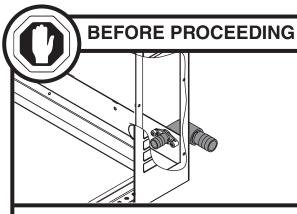

Prior to installing the docking assembly, ensure that the drain fitting is oriented (right or left) correctly for your installation. An optional straight drain fitting is also supplied. You may need to remove the back panel of the docking assembly in order to re-orient or change the drain fitting. Replace back panel prior to mounting the docking assembly.




Wall bracket accessory

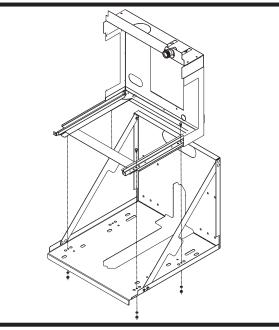


Mount docking assembly to wall bracket accessory

Machine stand accessory

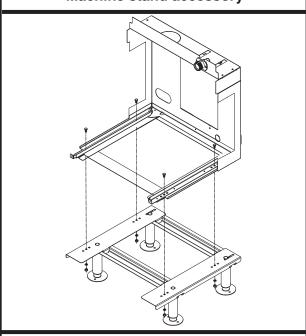

Mount docking assembly to machine stand accessory

4.1 Docking assembly

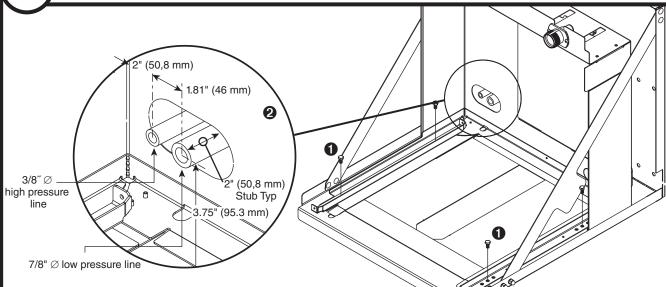


- Mount docking assembly •
- "Rough-in" the refrigerant piping 2

Install the ice transport tube.



5.1 Ice transport tube installation

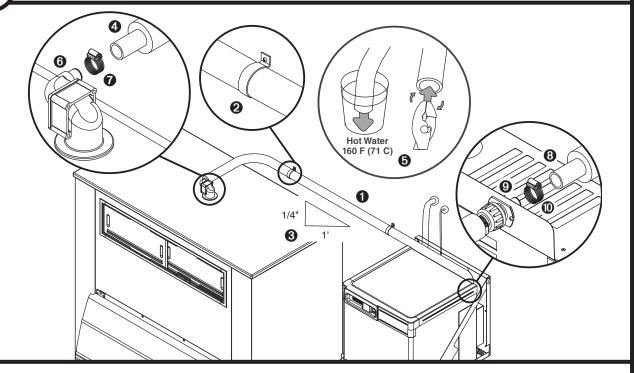

Ice transport tube tips

- Insulate entire length of ice transport tube
- Secure ice transport tube **2** as needed to prevent dips and traps from forming. For long tube runs see guide on page 13.
- Pitch ice transport tube at least 1/4" per foot (6,4mm/.3m)
- Ice transport tube must drain towards ice machine


Ice transport tube to bin

- Be sure tube ends are square 4
- Heat end of transport tube in cup of 160 F (71 C) hot water to soften and spread with pliers **5** before making connection to ease assembly
- Push ice transport tube onto ice machine nipple 6
- Install hose clamp 7

Ice transport tube to Ice machine

- Be sure tube ends are square 3
- Heat end of transport tube in cup of 160 F (71 C) hot water to soften and spread with pliers 5
 before making connection to ease assembly
- Push ice transport tube onto ice machine nipple 9
- Install hose clamp (1)



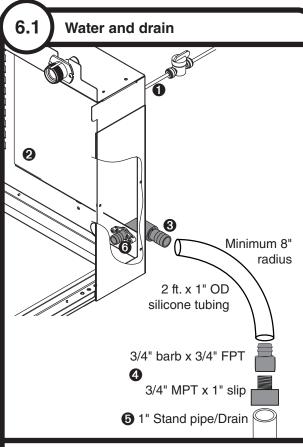


- Rough-in ice machine potable water supply ①. 3/8" push-in connection will be made at included shut-off valve then at back of docking station into solenoid.
- Remove access panel if necessary 2.
- Connect the silicone tubing to the ice machine 3/4" drain barb **3**.
- Assemble the 3/4" barb x 3/4" FPT to the 3/4" MPT x 1" slip. Connect the other end of the silicone tubing to the 3/4" barb 4.
- Connect the 1" slip fitting to the 1" stand pipe/drain **5**.

Note: Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m).

- Apply Petrogel to barbed drain fitting 6
- · Replace access panel.

Chassis drain plumbing - required


- Plug must be removed from John Guest fitting.
- Route 3/8" drain tubing through knockout in back of docking station and insert fully into John Guest fitting connection at the rear of the machine chassis. Route other end of 3/8" drain tubing to drain.
- Drain must slope 1/4" inch per foot (6 mm per 30,4 cm).

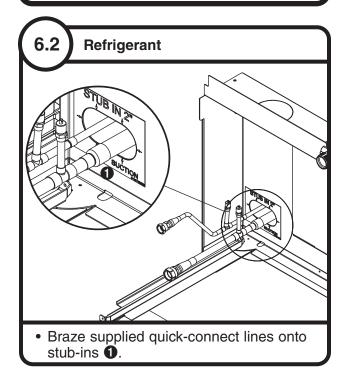




Connect docking assembly to ice machine.




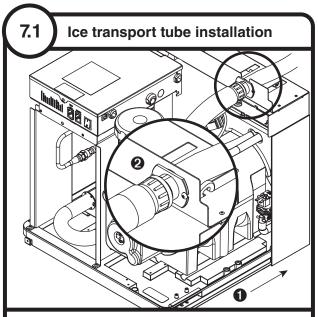


- · Slide ice machine into docking assembly ensuring that drain tube is fully seated on barbed drain fitting 1
- Insert ice transport tube all the way into coupling and tighten nut firmly 2

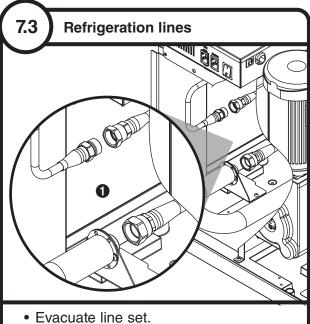


- Connect self-sealing liquid and suction line fittings 1

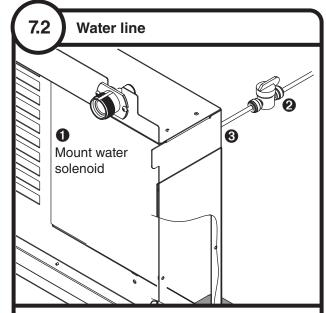


- · Mount water solenoid to inside rear of docking assembly using one screw 1
- Insert potable water line into valve 2
- Insert into push-in connection of water solenoid 3

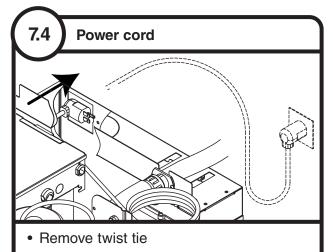

 Carefully pass cord thru opening and plug into wall outlet

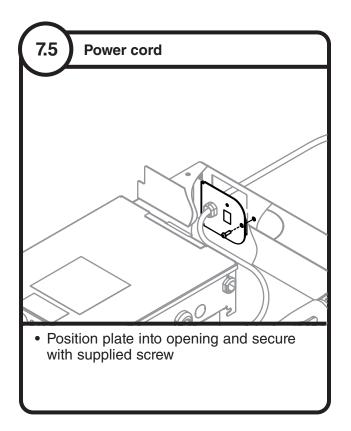


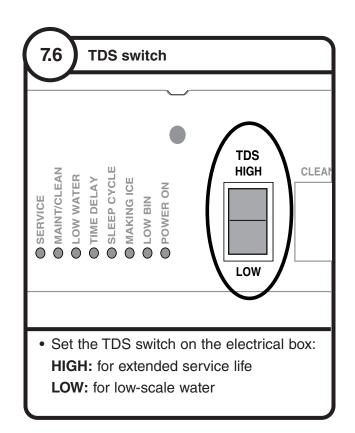






8.1 Install condensing unit

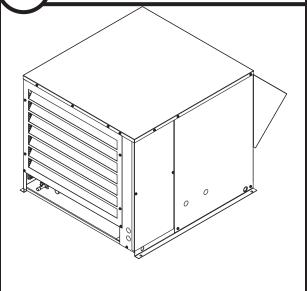

- Complete installation of condensing unit or connection to rack system.
- Required rack system capacity at 0 F (-18 C) evaporator (EPR supplied by installer).

1810N: 15,700 Btu/hr (3956 kcal/hr) 2110N: 18,200 Btu/hr (4586 kcal/hr) 8.2 Install ice machine front cover

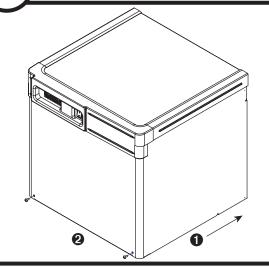


- Slide ice machine cover over machine ensuring that tabs on back of cover slip under louvers on back of docking assembly
- Insert and tighten two screws through cover and into docking assembly 2

NOTICE

Ice machine MUST be sanitized prior to operation!

Consult Operation and Service Manual provided with ice machine for sanitizing instructions.

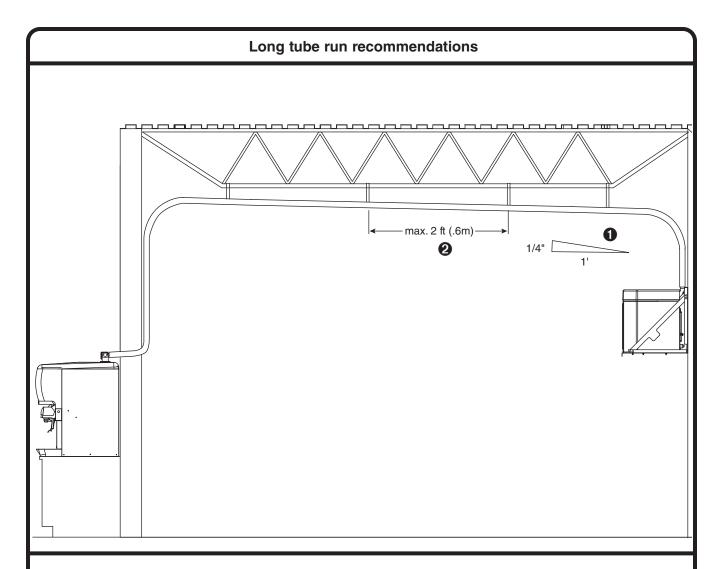

- Pitch ice transport tube to allow melt water to drain towards ice machine 1
- Secure insulated ice transport tube at least every 2 ft (.6m) to prevent dips or traps 2

Horizon, Horizon Elite, Maestro, Harmony, Ice Manager, SafeCLEAN, Sani-Sponge, RIDE and Vision are trademarks of Follett Products LLC. Chewblet is a registered trademark of Follett Products LLC, registered in the US. 801 Church Lane • Easton, PA 18040, USA Toll free (877) 612-5086 • +1 (610) 252-7301

www.follettice.com

01157874R02

© Follett Products LLC 8/21